

Contents:

| | |
|---|-----------|
| Introduction | 4 |
| General | 4 |
| Safety | 5 |
| Intended Use | 5 |
| Warranty Conditions..... | 6 |
| Description | 6 |
| Operation of the pump..... | 6 |
| Pump hose | 7 |
| Hose Lubrication | 7 |
| Drive systems | 8 |
| Available options | 8 |
| Installation | 9 |
| Unpacking | 9 |
| Storage..... | 9 |
| Locating the Pump | 9 |
| Connecting the Pipework | 10 |
| Pulsations..... | 11 |
| Lifting the Pump | 12 |
| Mounting the Pump | 12 |
| Electrical Connection | 12 |
| Use of Frequency Inverters | 13 |
| ATEX Approved Units | 13 |
| Commissioning..... | 14 |
| Prestart-up Checks..... | 14 |
| Start-up Checks..... | 14 |
| Maintenance | 15 |
| Routine Maintenance | 15 |
| Cleaning the pump Hose..... | 16 |
| Hose Removal..... | 16 |
| Replacing the Roller Bushes | 17 |
| Adjusting the Compression Rollers | 18 |
| Fitting the Pump Hose..... | 18 |
| Fitting the Front Cover | 21 |

| | |
|---|-----------|
| Rotor Removal | 21 |
| Gearbox Drive Removal | 21 |
| Drive Protection Seal Removal | 22 |
| Drive Protection Seal Replacement | 22 |
| Gearbox Adaptor Replacement..... | 22 |
| Gearbox Drive Replacement..... | 22 |
| Rotor Replacement | 23 |
| Hose Connector Assembly..... | 23 |
| Parts List & Sectional Drawing | 24 |
| User Guide | 26 |
| Troubleshooting | 26 |
| Specifications | 28 |
| Pump operating conditions | 28 |
| Materials of Construction..... | 28 |
| Hose Lubricant Quantities | 29 |
| Weights and Dimensions..... | 29 |
| Recommendations for Hose Storage | 30 |
| EC Declaration of Conformity..... | 31 |
| Product Use Declaration Form | 32 |

Contact Information:

Manufacturer

Enviroflex Limited
Pump Point
Ascot Drive
Derby
DE24 8GZ

www.enviroflexpumps.com

Tel: 01332 913200 Fax: 01332 653500

International Tel: +44 (0) 1332 913200

International Fax: +44 (0) 1332 653 500

Authorised Distributor

Manual Revision Feb 2024

The information contained in this document is believed to be correct but neither Enviroflex nor its distributors or representatives accept any liability for any errors or omissions and reserves the right to alter any specifications without notice.

This manual is owned by Enviroflex Limited and may not be reproduced by any means in part without their written consent. Reproduction by the user for the purposes of Installation, Operation and Maintenance of their L Series peristaltic pump only excepted.

Copyright 2024 All rights reserved.

Introduction

Thank you for choosing a quality pump from Enviroflex Limited

Critical information before start up:



For safety reasons and in order for you to get the full usage of your new pump, it is necessary to read this manual thoroughly before putting it into service.

Ensure all commissioning checks on page 14 have been carried out

Within 7 days of delivery and before mounting and installing the pump please make sure that the unit corresponds exactly to that ordered and has not been damaged during transport.

This manual is divided into 4 parts:

1. **Introduction** to give the user an overview of the pump and this manual.
2. **Installation Guide** for installing or uninstalling and commissioning the pump.
3. **Maintenance Guide** for maintenance, repair or troubleshooting.
4. **User Guide** for daily use of the pump.

The L series pump range provides a high quality product that is designed to provide reliability, low energy consumption and low maintenance costs.

Enviroflex Limited supplies the complete range of peristaltic hose pumps including 10mm (3/8"), 15mm (1/2"), 20mm (3/4"), 25mm (1"), 32mm (1 1/4"), 40mm (1 1/2"), 50mm (2"), 65mm (2 1/2"), 80mm (3"), 100mm (4") and 150mm (6").

General


These instructions are intended as a reference book by means of which qualified users are able to install commission and maintain Enviroflex Limited L Series peristaltic pumps. These instructions do not absolve the user of responsibility for carrying out work in accordance with good engineering practices and adherence to local Health & Safety regulations.

Documentation on the drive system used with the pump is not included within this manual. Reference must be made to separate documentation for the drive system, and its recommendations and instructions strictly observed.

For further information specifically about the L series range of peristaltic pumps which is not found within these instructions, please contact Enviroflex Ltd, or your authorised local dealer. Please ensure you have the following data at hand:

- serial number of the pump
- material of the pump hose
- serial number of the drive gearbox and motor

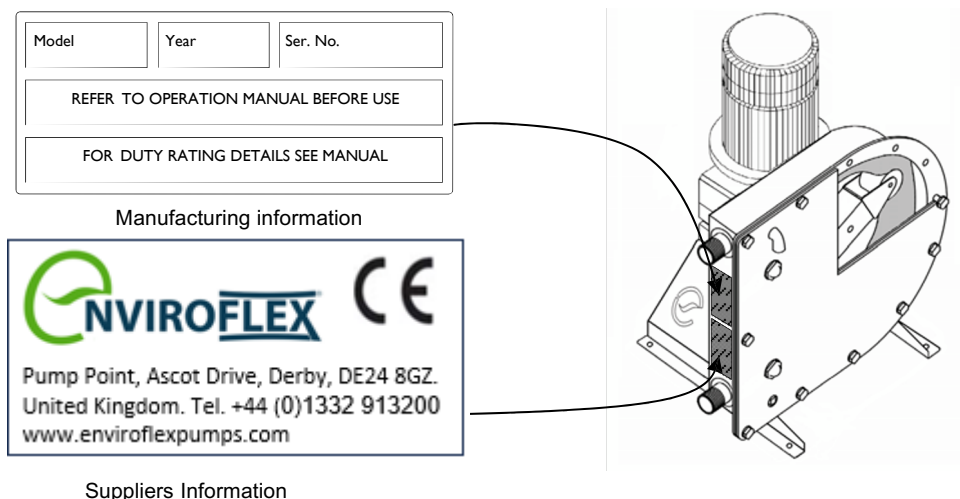


Identification plates are mounted on the pumphead, drive gearbox and electric motor.



Labels fixed to the pump body contain model type, year of manufacture, product serial number and manufacturer's details.

Safety

In these instructions the following symbols are used:

| | |
|---|--|
|  | WARNING Procedures, which, if not carried out with the necessary care, may result in serious damage to the pump equipment or in serious bodily harm. |
|  | CAUTION Procedures not carried out with the necessary care, may result in serious damage to the pump equipment, the surrounding area or the environment. |
|  | Remarks, suggestions and advice. |

During installation & maintenance all personnel should ensure they wear suitable personal protection equipment (PPE) such as safety glasses, gloves, safety boots and safety helmets as appropriate.

Intended Use

Enviroflex Limited L series peristaltic pumps are designed exclusively for pumping suitable products as defined in the technical data sheet supplied with your final quotation. Every other or further use is not in conformance with the "intended use" as laid down in EN 292-1.⁽¹⁾ The manufacturer cannot be held responsible for damage or harm resulting from use other than the "intended use".

If you wish to change the application of your pump, please contact Enviroflex Limited, or your authorised local dealer to establish if the change is appropriate for the supplied pump.

⁽¹⁾ The "Intended use" as laid down in EN 292-1 is "... the use for which the technical product is intended in accordance with the specifications of the manufacturer, inclusive of his indications in the sales brochure". In case of doubt it is the use which appears to be its intended use judging from the construction, execution and function of the product. Observing the instructions in the user's documentation also belongs to intended use.

Warranty Conditions

Unless stated otherwise in the Technical Selection Sheet provided at the time of pump selection, the manufacturer offers a two-year warranty on proper workmanship of all parts of the pump. Exclusion is made for normal wear and tear of consumables, such as pump hoses, lubricant, hose clamps, compression rollers, bearings and bushes, wear ring and seals, or parts which have been misused or damaged through negligence.

The warranty only applies if the pump has been used for the application specified in the technical selection sheet and according to the guidance in this manual. Operation at pressures outside of the range specified in the Technical Selection Sheet shall invalidate this warranty.

This manufacturer's warranty is null and void for any user who uses parts not of Enviroflex Limited original supply in their L series peristaltic pump (including use of an alternative hose lubricant).

The warranty is strictly a return to base warranty, which means that the pump is required to be returned to our UK factory by arrangement for any investigation, replacement or repair work. The cost of transport back to our factory is not covered by this warranty; however with any valid warranty claim all time, replacement parts and carriage back to the original delivery address are included.

Any parts to be returned to the manufacturer must be accompanied by a fully filled in and signed declaration form declaring the conditions of use and materials pumped. Parts which have been contaminated or which have been corroded by chemicals or other substances which can pose a health risk must be cleaned before they are returned to the manufacturer.

Furthermore, it should be indicated in the declaration form what specific cleaning procedures have been followed, and that the equipment has been decontaminated.

The declaration form is required for all items, even if the parts have not been used.

A Declaration Form can be found at the end of this manual.

Warranties purporting to be on behalf of Enviroflex Limited made by any person, including representatives of Enviroflex Limited, its subsidiaries, or its distributors, which do not accord with the terms of this warranty shall not be binding upon Enviroflex Limited unless expressly approved in writing by a Director of Enviroflex Limited.

Description

Operation of the pump

The heart of the L series peristaltic pump is a specially constructed pump hose which lies within the pump housing. (Upon pump installation both ends of this hose are connected to the suction and discharge lines). A rotor with two opposing compression rollers lies in the centre of the pumphead.

During pump operation the rotor rotates, with the compression rollers compressing the pump hose. This action "pushes" the pumped fluid through the hose, and as soon


as the compression roller has passed, the hose recovers to its original shape due to the mechanical properties of the material.

Simultaneously fresh pumped fluid is drawn into the hose behind the compression roller by the (continuous) turning motion of the rotor.

The second compression roller will subsequently compress the pump hose. Due to the continuous rotating movement of the rotor not only is new product sucked in, but the already present product is pushed out by the moving compression roller. When the first compression roller leaves the pump hose, the second compression roller has already closed the pump hose and the product is prevented from flowing back. This is known as the “positive displacement principle” pumping principle.

Pump hose

The pump hose is made of specially compounded rubbers, reinforced with nylon cords. The outer cover of the pump hose is always made of natural rubber, whilst the inner layer is supplied in a variety of materials to suit the product to be pumped.

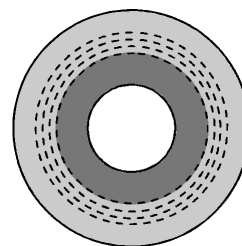

Dependent on the specific requirements of your application a corresponding pump hose must be selected. For each pump model various hose types are available.



Consult Enviroflex Limited or your authorised local dealer for more detailed information about the range of hoses available, and their chemical and temperature resistance.

Enviroflex pump hoses have been carefully machined, to ensure minimum tolerances in wall thickness. It is very important to guarantee the correct compression of the pump hose, because over compression can cause too high a load on the pump and pump hose leading to reduced pump hose life and gearbox failure.

Under compression will result in loss of capacity and backflow resulting in reduced pump hose life.



Please refer to the maintenance section of this manual regarding adjustment of hose compression settings.

Hose Lubrication

The pumphead is part filled with our specially compounded Enviroflex Roller Lubricant. The lubricant lubricates the compression rollers and movement between the hose and the pump housing and the cover.

To those familiar with other types of peristaltic pumps utilising compressions shoes, our lubricant may appear thin, but this is essential in order to reach the roller bearings with maximum efficiency of lubrication.

Our lubricant is the result of decades of development and is perfectly mixed for use specifically in the L series pumps, ensuring the hose is fully lubricated at all times with no reaction on the hose material that would cause swelling and early hose failure.

Enviroflex Roller Lubricant will not freeze during cold weather.

Drive systems

The L series pumps described in this manual use a variety of drive types. Motors and gearboxes are selected according to the particular application for which the pump is applied.

Available options

The following options are available for the L series range of pumps:

- High (lubricant) level switch (detects hose failure)
- Flanged pipework connections
- Complete stainless steel pumps

Installation

Unpacking

Upon unpacking of the pump check and inspect all items against the purchase order and packing list and for any damage caused during shipment. All claims for shortages and/or damage must be notified immediately to Enviroflex Limited.



Suitable lifting equipment must be used when handling components and assembling pumps.



ENVIRONMENT

When disposing of unwanted packaging materials, please consider the possibilities for reuse or environmentally friendly processing of packaging materials.

Always observe local regulations with respect to disposal of non reusable items.

Storage

After receipt and inspection, if pumps are not to be put into service immediately provision should be made for the pump to be rotated for a couple of turns on a weekly basis, ensuring the rollers are not allowed to come to rest in the same position consecutively. Alternatively one roller can be removed from the pump, leaving the remaining roller not in contact with the hose between the inlet and outlet ports.



Failure to adhere to the above procedure may result in a 'permanent set' of the hose which can result in reduced performance and premature hose failure.

Pumps that are to be stored for extended periods of time should have the hoses removed and stored in accordance with Enviroflex recommendations. The pumps should be repackaged and placed in a suitable clean dry storage area free from excess moisture and vibrations. Protective blanking caps fitted before despatch from the factory should not be removed. Any unpainted surfaces not factory treated with a rust inhibiting coating should have a protective coating applied.

Where applicable, if pumps were supplied with electric motors fitted with anti-condensation heaters, these should be connected to a temporary supply and switched on throughout the storage period.

Locating the Pump



Before mounting the pump, make sure that all your site safety procedures have been reviewed and that any appropriate risk assessments have been completed.



Upon installation ensure that all markings on the pump will be clearly visible when installation is complete.

Ensure the pump is to be sited in an area where the ambient temperature during operation is not below -10° and above $+40^{\circ}\text{C}$.

Check that the foundation where the pump is to be mounted can carry the load of the pump. Also have the appropriate SWL marked lifting gear / crane ready for the given situation.

Ensure the foundation/floor surface is flat and horizontal. Minor irregularities in surface level can be accommodated by the use of shims placed under the support frame.

Ensure there is sufficient room around the pump to carry out the necessary maintenance activities. Particularly ensure the front cover door can be opened and a hose taken out and replaced (If it cannot, it maybe possible to modify the door to remove hinge, please enquire).

Ensure the installation environment is sufficiently ventilated allowing heat developed by the pump and drive to be discharged, particularly that the motor cowl has sufficient air to circulate to support cooling.

No special tools are required to install the L series pumps, other than ordinary hand-tools and a hammer/drilling machine for the installation of the foundation bolts.


Connecting the Pipework

It is recommended that the connection to a pipe system is made as a flexible joint. There are several flexible systems on the market which include both metallic and rubber systems.

By making a flexible joint, the risk of introducing vibrations into the complete pipe system is reduced. Vibrations may cause wear and in some cases fatigue fractures in the pipe system.

The pipework system must be independently supported and must not use the pump in anyway to support its weight (The pipe system must never hang by the connections of the pump).

Below is a table of the maximum loads that can be applied to the pump connections by the pipework.

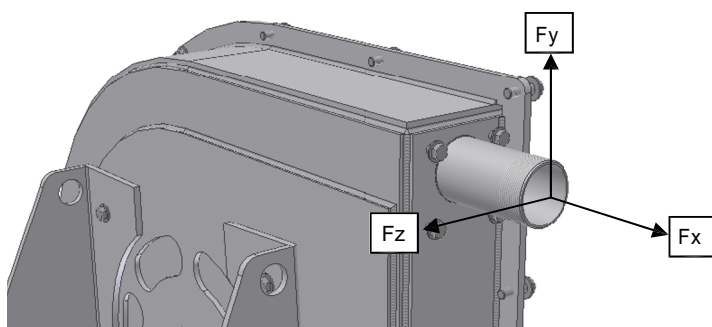

| Permissible Load (N) | |
|----------------------|-----|
| Fx | 600 |
| Fy | 150 |
| Fz | 150 |

Suction line bore must be larger than the bore size of the pump hose. Discharge line bore must be the same or larger than the bore size of the pump hose.

Keep the suction and delivery lines as short and direct as possible.

Suction and discharge lines should preferably exit straight from the pump so that the pump is not pumping directly into a restriction for example a 90 degree bend, as this may cause the hose to come off. Where bends are used, ensure the radiuses are as large as possible. It is recommended to use Y-connections instead of T-connections.

Prevent any possibilities of exceeding the maximum working pressure of the pump. It is essential that you discuss this with your system designers in order to ensure safe system and pump operation. If necessary fit an overpressure protection device.



To avoid misunderstanding, protecting the motor against over current will not protect the pump from overpressure. Pump overpressure needs to be protected against independently using a pipeline mounted overpressure protection device.

All L series pumps have a pressure overflow connector found on the front of the pump above the lubricant fill plug. When the pump hose fails, liquid will come out of this overflow connector. If this is a potential safety or hygienic issue, the connector will need to be piped back to a safe location in a way that will not impede normal atmospheric pressure reaching the pump body during normal operation.



Consider the maximum permissible working pressure of the pump and pipework used.

Exceeding maximum working pressures may lead to serious damage.

Pulsations

Some systems require pulsation dampers to avoid excessive and damaging pressure spikes and vibrations. Situations that may lead to excessive pulsations and vibration are:

- incorrectly secured pipelines
- high pump speeds with long suction and delivery lines or the product SG is high
- pipeline bore is too small

Where unacceptable pulsations are encountered, it may be possible to install pulsation dampeners to alleviate the problems.

Dampeners need to be sized very carefully in order to protect the pump and system from excessive pressure peaks.


- Never use an existing dampener employed on another application or pump make and assume it will automatically work on an application with an L series pump. Different pump displacements and system characteristics often mean a dampener will not work effectively.
- Many dampeners are not suitable for variable speed applications. Where pump speeds and pressures vary, dampeners need to be carefully selected and sized to accommodate all the duty conditions.



Consult Enviroflex Limited or your authorised local dealer for more detailed information about the need and use of pulsation dampeners.

Lifting the Pump

The complete pump can be lifted using the lifting eyes located at the top of the pump frame. Due to the selection of drives available the centre of lift will vary dependant upon the size and weight of the drive fitted. If desirable to lift the pump squarely an additional lifting strap (as shown in red) may be positioned around the base of the motor. The length of this will need to be adjusted to establish a level lift if so desired. Suitably rated lifting straps or slings only must be used. Gearbox and motor lifting eyes must not be used for lifting the complete pump unit.

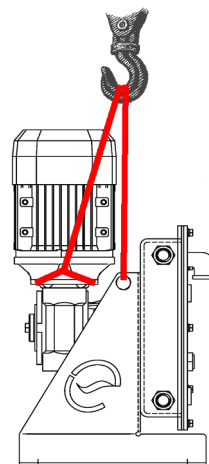

When lifting the pump ensure that all standard lifting practices are adhered to and carried out by qualified personnel only.

Mounting the Pump

The pump is fastened to the foundation via the holes in the frame or pump-chassis using suitable anchor bolts.

If the pump is to be mounted on rubber pads, it is very important that the connecting pipeline is fitted with a flexible joint.

Electrical Connection



Electrical connection of the pump must only be done by suitably qualified personnel.

The motor is to be thermally protected against overload by a protective circuit switch and is to have the correctly sized fuse according to the local existing rules and regulations.

Important:

In order to ensure that the pump remains free of static electricity, the pump needs to be grounded. This is done via the grounding of the motor. The motor must be grounded with a wire of sufficient size!

For electrical connection details, please see the motor datasheet.

The pump should have its own dedicated electrical isolation switch meeting the requirements of BS EN 60947 - 3 (Switches, disconnectors, switch disconnectors and fuse combination units) so that it is not possible to start the pump during maintenance. There should also be an emergency stop button meeting the requirements of BS EN 60947 - 5 - 1 (Electro - mechanical control circuit devices) and BS EN 60947 - 5 - 5 (Electrical emergency stop devices with mechanical latching function.)

It is recommended to have local electrical control to the pump for use during commissioning and maintenance operations.

These electrical items should be installed according to the manufacturer's instructions by an electrician qualified to install electrical equipment on machinery.

If the pump is incorporated into a more complex installation then the installer should ensure the completed installation complies with the Machinery Directive 2006/42/EC.

Use of Frequency Inverters

The pump will not come with a motor that is suitable for use with a frequency inverter unless this has been stated on the pump technical data sheet.

Use of an inverter when no allowance has been made for one, can be dangerous and may lead to motor failure.

Where the use of an inverter has been specified on the pump technical data sheet it is essential that the control panel does not allow an operator to run the pump outside of the turndown design parameters there specified.

Frequency inverters used with peristaltic hose pumps must be of the constant torque type, and ideally sized at least one size larger than the pump fitted motor kilowatts.

ATEX Approved Units




Standard L series pumps must not be used in potentially explosive hazardous atmospheres (European Directive 94/9/EC -ATEX Directive). If you require a pump to operate in a hazardous area classification, please contact Enviroflex Limited or your authorised local dealer for more detailed information.

Commissioning

Prestart-up Checks

Before commissioning, carry out the following checks:

- Check the pipework connections, ensuring there is no undue strain on the pipework.
- Ensure that there are no obstructions such as closed valves in the pipework. It is advisable to flush the system through with water to clear any debris.

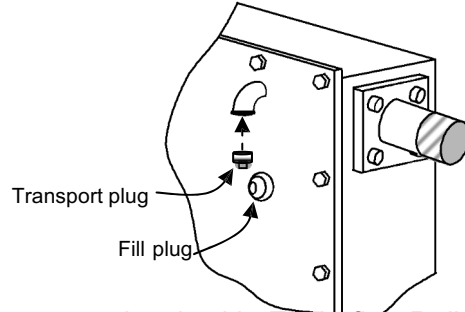

- Check the pump casing is filled to the correct level with Enviroflex Roller Lubricant. If necessary add lubricant. – **Before adding lubricant, check you have the correct hose lubricant; fill only with our Roller grade lubricant?**
- Check there is oil in the gearbox, and filled to the correct level.

It is advisable prior to powering up the pump to check rotation by hand to ensure there are no obstructions. This can be achieved as follows:

Isolate and lock off the electrical supply. Remove the motor fan cowl and turn the electric motor fan by hand to ensure free running. The motor should be rotated for enough turns to ensure the pump rotor has turned through 360 degrees. (If the gearbox ratio is 50:1, the motor fan must be rotated 50 revolutions). If any difficulties are found these should be investigated and rectified.

Start-up Checks

Prepare the electric motor for operation in accordance with the manufacturer's instructions, and ensure pump control panels are energised ready for operation.

When satisfied that all preliminary checks and procedures have been carried out, start up the pump.

Whilst running carry out the following checks:

- Check the rotation of the rotor.
- Check for any leaks in the system
- Check for excessive vibrations
- Check the pumping capacity of the pump.

Generally monitor the behaviour of the pumpset during the run period, ensuring that temperatures stabilise within the run period.

Check the integrity of the foundation holding bolts.

Following all start-up checks, if any items deviate from expected, refer to the "Troubleshooting" section of this manual or contact Enviroflex Limited or your authorised local dealer.

Maintenance



Only use original Enviroflex Limited parts when maintaining the pump. Enviroflex Limited cannot otherwise guarantee correct functioning of the pump. Any consequential damage that occurs from the use of non-original components cannot be warranted.

Routine Maintenance

The L series pumps are designed to have the minimum of service and maintenance.

A small number of simple preventive measures are however needed in order to ensure continuous and trouble free pump life.

Important: it is very important, that the pump is maintained according to the table below.



Never clean or repair the pump without it being fully isolated.

When cleaning, maintaining or repairing the pump, the power supply to the motor has to be disconnected by means of a key locked switch.

| Action | To be carried out | Comments |
|---|---|--|
| Check hose lubricant level | Before start-up and thereafter on a daily operational basis | Lubricant should be visible in the lower sight glass on the pump front cover |
| Check the pumphead for any lubricant leakage around the cover and the connections | Before start-up and thereafter on a daily operational basis | |
| Check pump for high temperature or unusual noise | On a daily operational basis | |
| Check compression rollers for wear | When replacing the pump hose | Replace if there is more than 1mm wear across the roller |
| Changing the hose lubricant | When replacing the pump hose | Only use Envirolube hose lubricants |
| Check gearbox oil level | Before start-up and thereafter on a daily operational basis | |
| Replacing the gearbox oil | Refer to the gearbox manufacturers instructions | |

In certain installations it may be desirable to try and change the pump hose before failure on a routine scheduled basis. If this is the case, we suggest changing the hose after 75% of the time the first hose lasted.

Due to the variety of motor and gearboxes supplied according to both application and client requirements, maintenance detail is not shown in this manual. Please refer to the manufacturer's manual for maintenance detail on your specific drive.

Cleaning the pump Hose

The inside of the pump hose is easily cleaned by flushing with water or any other compatible cleaning fluid. Ensure that the pump hose can not only resist the chemical compatibility of any cleaning fluids, but also the temperature of cleaning liquid used.

Cleaning systems must not generate pressures in excess of the pump operating design pressure.

Hose Removal



When pumping potentially hot, hazardous or dangerous media, it is critical to ensure that personnel are adequately protected during hose removal and that the hose is washed through with a media harmless to man and the environment before the hose is dismantled.



There can be a significant pressure difference between the upper and the lower pump connections. This can mean that while having vacuum in one connecting pipe there can be a large overpressure in the other connecting pipe. It is therefore essential that the pipework is depressurised safely prior to opening the pump cover and dismantling the hose.

Before dismantling any items, shut off the suction and discharge valves.

Drain the hose lubricant by positioning a container at the base of the pump, remove the top fill plug, remove the drain plug at the bottom of the pump and drain the lubricant into the container.




Always dispose of used lubricant in safe and proper manner. Refer to local Environmental restrictions as appropriate.

Unbolt the pump front cover and remove.

There are two options of hose removal with the L series pumps. Either the complete hose and inserts can be removed as one element assembly, or the hose can be removed with the inserts left in the pump.

With both methods of hose removal we suggest that one of the compression rollers is removed. To remove a roller ensure the roller is not in contact with the hose, remove the roller spindle screw and lift the roller out of the roller carrier. Rotate the rotor so that the remaining roller lies between the inlet and outlet ports. The hose can then be removed and a new one inserted easily without having to rotate the rotor. To refit the compression roller, rotate the rotor so that the roller to be replaced lies between the inlet and outlet ports.

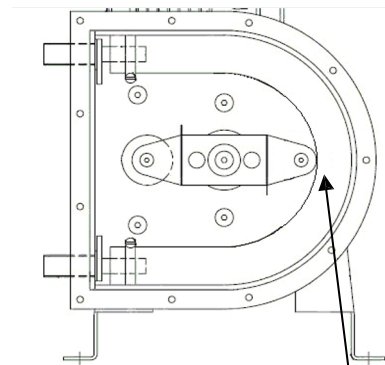


Roller removed

Removing the hose as an Element Assembly

First disconnect suction and discharge piping

Remove the insert retaining nut from both hose inserts

Lift the hose element assembly out of the pump, withdrawing the inserts through the pump body.

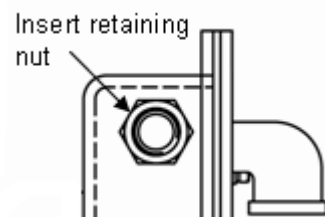

Removing the hose only

Note: There is no need to disconnect the suction and discharge piping when removing the hose only via this method.



Where difficulty pulling the hose off the connectors is encountered, try cutting the hose along the side of the connector as shown.

Carefully loosen top and bottom hose clamps.



From the bottom hose connector pull the hose off and out as far as possible. Continue pulling out the old hose until you have arrived at the top hose connection and finally pull the hose off this connection.

Check mechanical parts, such as Rollers, bushings and shafts for damage or wear.

Clean all components thoroughly, flushing with clean water if necessary. Pay particular attention to any residue of pumped material. Deposits of any abrasive media left within the pump body will be detrimental to future component life.

Check before replacing the hose that it is the correct diameter, and material and measure the exact thickness of the hose and note this down. This is needed if adjustment of the rollers is needed.

Before fitting the new hose, we recommend you check the compression roller occlusion setting to ensure optimum pumping efficiency throughout the pump life.

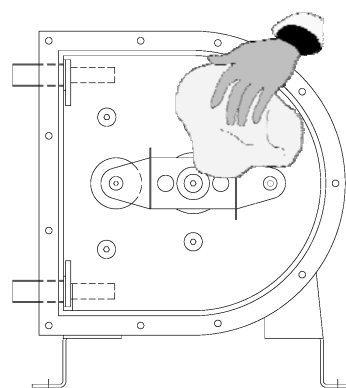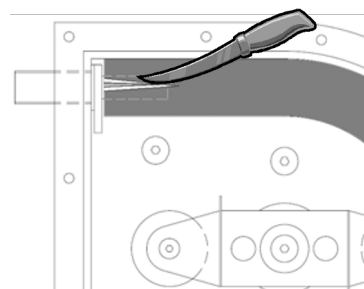

When ordering spare parts, please make reference to the serial number on the nameplate.

Replacing the Roller Bushes

With the hose removed, remove the compression rollers if not already done so, by removing the roller spindle screw and lifting the roller out of the roller carrier.

Using a suitable mandrel, press the old bushes out of the roller.

Lightly lubricate the outer surfaces of the new bushes and press into place, ensuring the face of each bush is flush with the face of the roller each side.

Refitting the roller is a reversal of the removal process.

Adjusting the Compression Rollers

The distance 'A' between the inner face of the pump body housing, and the compression roller should be set according to the following formula:

$$A = (2 \times t) - t_1$$

(at pressures 0 to 5 bar)

When the application pressure is to exceed 5 bar, subtract $0,1 \times t_1 \times P_d$

| Variable | Value |
|----------------------|--|
| A | Distance from roller to pump housing, see Figure 1 |
| t | Thickness of the hose wall, see Figure 2 |
| t₁ | Material dependent scale, see below |
| P_d | Nominal working pressure on the pump. |

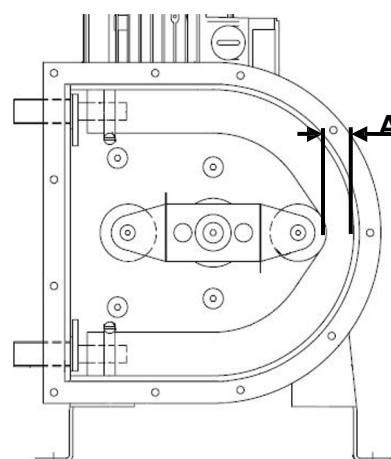


Figure 1 Distance from roller to pump housing

Example:

Hose thickness $t = 11.5$ mm

Hose material NBR $t_1 = 1.0$ mm

Working pressure $P_d = 7$ bar

$A = 2 \times 11.5 - 1.0 = 22.0$ mm

Subtraction from higher working pressure:

$0.1 \times 1.0 \times 7 = 0.7$ mm

$A = 22.0 \text{ mm} - 0.7 = 21.3$ mm

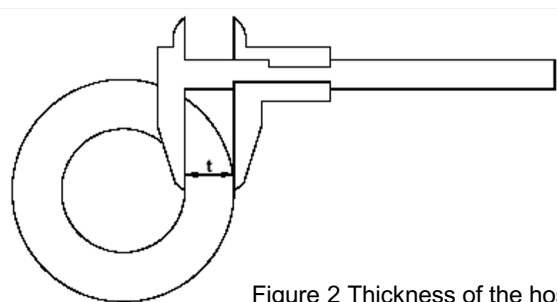


Figure 2 Thickness of the hose

| Hose material | Scale: t_1 | Hose material | Scale: t_1 |
|----------------|--------------|---------------|--------------|
| Natural rubber | 1,5 mm | Butyl | 1,0 mm |
| NBR (Nitrile) | 1,0 mm | Hypalon (CSM) | 1,0 mm |
| EPDM | 1,0 mm | Neoprene | 1,0 mm |

To adjust the compression roller gap shims should be inserted under the roller carrier. Additional shims of 0.5mm and 1.0mm thickness are available from Enviroflex Limited or your authorised local dealer.



The above procedure is intended as a guide only. After carrying out operational tests as detailed later in these instructions it may be found necessary to further adjust the rollers to decrease the distance 'A'.



Should it be found necessary to further adjust the rollers to decrease the distance 'A', this should be done in increments of 0,5 mm. If the rollers are adjusted too much, over occlusion of the hose will occur. Hose over occlusion is detrimental to hose life.

Fitting the Pump Hose



Take care when fitting the pump hose, there is a possibility of trapping hands if care is not taken.

Ensure the pump body housing is clean and free from foreign particles.

If not already removed, remove one of the compression rollers. To remove a roller rotate the rotor to ensure the roller is not in contact with the hose, remove the roller spindle screw and lift the roller out of the roller carrier. Rotate the rotor 180° so that the remaining roller lies between the inlet and outlet ports. The hose can then be inserted easily without having to rotate the rotor. To refit the compression roller, rotate the rotor 180° so that the roller to be replaced lies between the inlet and outlet ports.

Refitting the hose as an Element Assembly




Prior to installing a new element hose assembly, ensure that both hose inserts are aligned correctly. The hose inserts can only be fitted to the pump in one orientation, checking the correct orientation and alignment now will avoid delays later.

Correct alignment can be achieved by assembly on a flat surface ensuring both insert flanges sit flat on the surface whilst assembly takes place.



It is important to ensure correct alignment of the hose inserts. Misalignment will result in a twisted hose once the hose is fitted, leading to premature hose failure.

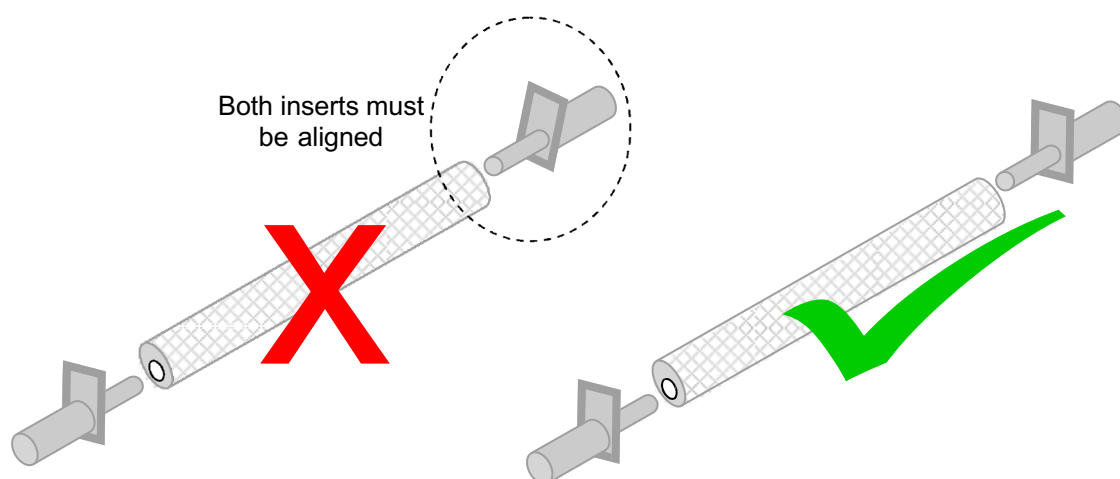

Push the hose onto the hose inserts along with the hose clamps – do not tighten clamps.



Aid assembly by lubricating inserts and hose bore with hose lubricant.



Never lubricate the hose, or any components in contact with the pump hose with mineral oils or lubricants, these are not compatible with the materials of hose construction.

Ensure the hose is pushed up to the insert flange on both connections, and that the inserts are in correct alignment.

Tighten both hose clamps and re check the insert alignment.




If the assembled hose element is not to be installed into the pump straight away, ensure the assembly is wrapped and stored in accordance with Enviroflex Limited recommendations.

Prior to fitting to the pump, ensure the hose assembly is clean and free from grit and particles on the outer cover.

Insert the sealing washers over the threaded connections.

Insert the hose element assembly in to the pump, passing the threaded connections through the respective port in the pump body, with the sealing washer on the inside of the pump body.

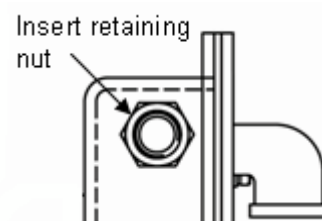

Lightly lubricate the threaded connection and fit and tighten the insert retaining nuts, ensuring that the connections do not twist and remain square as the retaining nuts are tightened.

The hose must now be properly positioned in the pump housing as detailed below.



Failure to correctly position the hose may lead to premature hose failure.
Refitting the hose only (inserts not removed)

Push the hose clamps and hose onto the top connector – do not tighten clamps.




To aid assembly, lubricate the hose connector and hose bore with a little hose lubricant.



Never lubricate the hose, or any components in contact with the pump hose with mineral oils or lubricants, these are not compatible with the materials of hose construction.

Push the hose over the bottom connector put the hose clamps over the hose - do not tighten clamps.

With the roller removed the hose can be pushed into the housing.

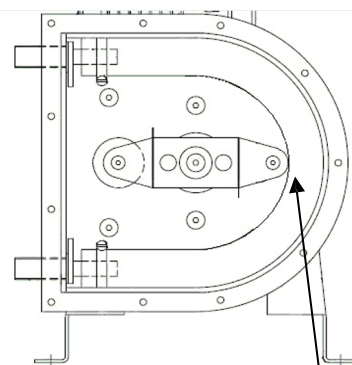

Roller removed

Positioning and Seating the hose


Ensure the hose clamps are loose. (If the hose was fitted as a complete element with inserts, it will be necessary to loosen the clamps.)

Push the hose firmly into the “U” arc of the pump body, ensuring contact is made with the hose and pump body along the complete length of the compression path and then tighten both hose clamps.



If difficulty is found seating the hose against the pump body try refitting the roller as below, the action of the rollers compressing the hose as the pump is rotated will help position the hose.

Refit the compression roller, by first rotating the rotor 180° so that the roller to be replaced lies between the inlet and outlet ports.

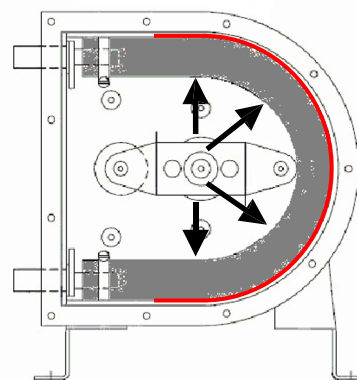

Always recheck the roller gap after you have refitted the roller.

Fitting the Front Cover

Fit the front cover gasket seal and bolt the front cover to the pump body housing.



Passing a couple of fixing bolts through the front cover and “hanging” the gasket on these will aid with assembly and alignment of the gasket.



Be careful to avoid cross threading. When the cover bolt holes are not fully aligned with the threaded holes in the pump body housing the risk of cross threading the bolts can occur.

Ensure the lubricant drain plug is installed with PTFE tape or similar demountable pipe thread sealant.

Fill the pump housing with lubricant through the fill plug hole. Once filled you should be able to see the lubricant in the middle of the sight glass at the front of the pump. Replace the fill plug and check the pump housing for leakage.

If previously disconnected, reconnect all pipework and open all suction and discharge valves.

The pump is now ready for normal operation. Upon restarting check for abnormal vibrations and other irregularities such as abnormal noise.

Rotor Removal

Follow the procedures as detailed earlier for the removal of the pump hose.

The rotor and shaft on the L10 & L15 pumps can be removed as one complete unit. The shaft is fitted through a hollow shaft in the gearbox.

If fitted, remove the protective cover on the rear of the gearbox covering the shaft clamping bolt. Remove the M10 bolt and clamp washer.

Pull the rotor assembly out of the pump, sliding the rotor shaft out of the gearbox.



Do not hammer the rotor assembly shaft if it is a tight fit. In such instances use a proprietary puller to extract the complete rotor assembly.

Gearbox Drive Removal

Once the rotor has been removed, the gearbox can be removed if required.

The fixing screws are hexagon headed screws through the gearbox flange into an adaptor plate fixed to the rear of the pump housing.



Before removing the gearbox fixing bolts ensure the gearbox is adequately supported via the correct lifting method, and that the pump is properly fastened to the floor as removing the gearbox will cause a sudden change in the centre of gravity.

Remove the gearbox fixings and pull the gearbox off the mating spigot.

Drive Protection Seal Removal

A seal is fitted between the pump and the gearbox. This seal acts as protection for the gearbox drive in the event of a hose failure, reducing the chance of contaminated hose lubricant from reaching the front seal of the gearbox.



Once the rotor has been removed, the Drive Protection Seal will be seen. Whilst it is possible to remove the seal without gearbox removal, it may be found easier to remove the gearbox and adaptor plate in order to provide better access to the seal.

The gearbox adaptor plate can be removed once the gearbox has been removed. The 4 off countersunk fixing screws can be accessed from within the pump body

housing. A little effort may be needed to remove the adaptor plate, as the joint will be sealed with a proprietary silicone gasket sealer. The seal can now be removed from within the gearbox adaptor.

Drive Protection Seal Replacement

Ensure the gearbox adaptor plate is clean. Lightly lubricate the seal bore with a silicone based lubricant, and using a fly press or similar carefully press the new seal into place, taking care not to damage the seal lip.

Gearbox Adaptor Replacement

With the new Drive Protection Seal fitted, the adaptor plate can be fitted to the pump body housing.

Prior to assembly clean and degrease all mating surfaces, ensuring all faces are free from traces of old silicone gasket sealant.


Apply a thin film of “Instant Gasket” sealant to the mating face of the gearbox adaptor and

locate the counter bored flange on the adaptor into the spigot on the rear of the pump housing. Line up the four fixing holes and insert the M8 x 20mm countersunk socket head screws through the rear of the pump housing.



Note: the 4 off countersunk screws must have “Instant Gasket” sealant

applied under the head before insertion through the rear of the pump body housing.

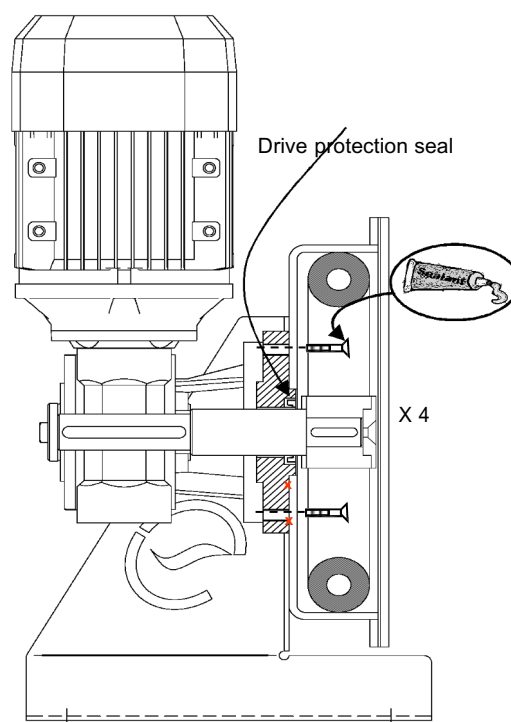

Gearbox Drive Replacement

Prior to assembly clean and degrease all mating surfaces, ensuring surfaces are free from paint and sealants.


To mount the gearbox drive assembly to the gearbox adaptor, first locate the counter bored flange on the gearbox onto the spigot on the rear of the gearbox adaptor. Line up the four gearbox holes and insert the M10 hexagon head screws and washers through the gearbox flange into the adaptor.

Rotor Replacement

Clean the shaft of the rotor assembly and apply a small amount of anti-seize compound such as Copaslip® to the shaft and keyway. Taking care not to damage the gearbox shaft seal, slide the rotor shaft into the gearbox hollow shaft as one unit.



Do not hammer the rotor assembly if the shaft is a tight fit in the gearbox. In such instances pull the shaft into the gearbox with a long bolt and nut as shown.

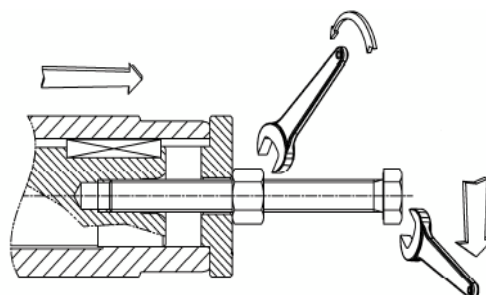

With the rotor assembly shaft inserted fully into the gearbox, bolt up with the M8 shaft clamping bolt and washers provided. Attach the shaft end protection cover with the 4 off M6 screws supplied.




Refer to the gearbox drive manufacturer's instructions if necessary. Ensure that the protective cover is fitted over the shaft clamping bolt.

Hose Connector Assembly

The hose connector inserts may be fitted independently, rather than as a hose element assembly. After first ensuring all mating faces are clean, fit the sealing washer over the threaded connection of each hose connector.


Insert hose connector in to the pump, passing the threaded connection through the respective port in the pump body, with the sealing washer on the inside of the pump body.

Lightly lubricate the threaded connection then fit and tighten the insert retaining nuts, ensuring that the connections remain square and do not twist.

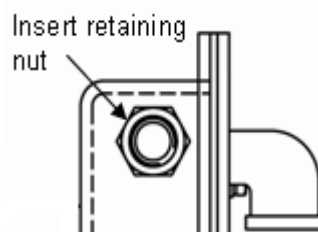



Exploded View for L10 Series Pump

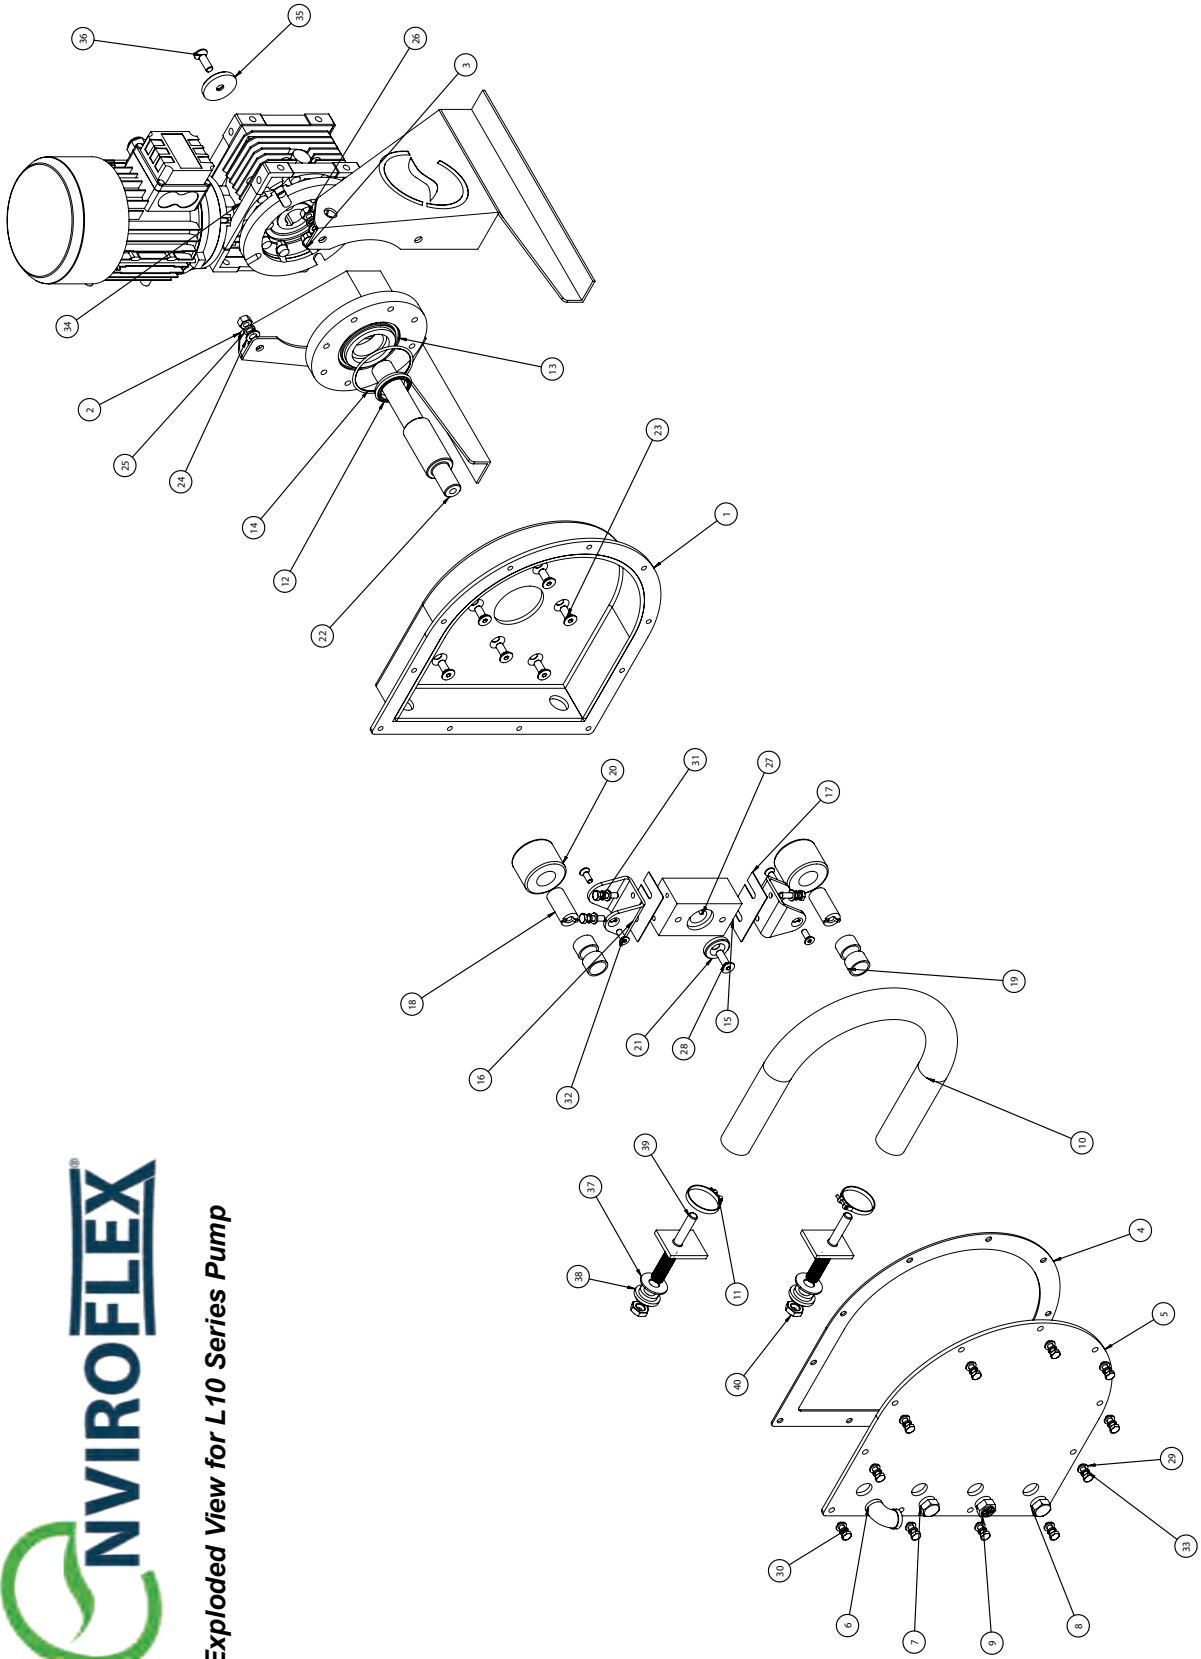

L10 Series Pump Parts List


| Item No. | Part Number | Description | * Weight (gramme) Per Unit | Qty. |
|----------|------------------------------------|---|----------------------------|------|
| 1 | L-10-PH-1 Pump Housing | Housing Body | 4695.63 | 1 |
| 2 | L-10-F-L-1 | Pump Frame Left | 1252.29 | 1 |
| 3 | L-10-F-R-1 | Pump Frame Right | 1252.28 | 1 |
| 4 | L-10-FC-DS-1 | Front Cover Door Seal | 60.21 | 1 |
| 5 | L-10-FC-1 | Front Cover | 3095.61 | 1 |
| 6 | LT-5000S | Breather Elbow | 32.75 | 1 |
| 7 | LP-1003 | Fill Plug | 9.52 | 1 |
| 8 | LP-1004 | Drain Plug | 9.52 | 1 |
| 9 | LT-5012 | Sight Glass | 9.86 | 1 |
| 10** | L-10-NRH | Pump Hose - NATURAL RUBBER | 395.75 | 1 |
| | L-10-NRH-FG | Pump Hose - NATURAL RUBBER (FOOD GRADE) | 395.75 | 1 |
| | L-10-NIT-IND | Pump Hose - NITRILE (INDUSTRIAL) | 395.75 | 1 |
| | L-10-NIT-FG | Pump Hose - NITRILE (FOOD GRADE) | 395.75 | 1 |
| | L-10-EPDM | Pump Hose - EPDM | 395.75 | 1 |
| | L-10-HYP | Pump Hose - HYPALON | 395.75 | 1 |
| 11** | LC-4014 | Hose Clip | 7.00 | 2 |
| 12 | LS-6000 | Drive Protection Seal | 3.00 | 1 |
| 13 | L-10-GB-MF-1 | Gearbox Adaptor Plate | 670.74 | 1 |
| 14 | LS6808 | Gearbox Mounting O Ring | 1.79 | 1 |
| 15 | L-10-R-1 | Rotor | 420.70 | 1 |
| 16 | L-10-R-C-1 | Roller Carrier | 149.09 | 4 |
| 17 | L-10-SH-3 / L10-SH-4 | Shim 0.6mm / Shim 1.0mm | 11.91 | 4/8 |
| 18 | L10-ROL-SH-1 | Roller Shaft | 89.20 | 2 |
| 19 | L-10-ROL-B-1 | Roller Bush | 2.38 | 4 |
| 20 | L-10-ROL-1 | Roller | 67.34 | 2 |
| 21 | L-10-R-RC-1 | Roller Clamp Washer | 22.37 | 1 |
| 22 | L-10/15-R-RS-5 | Rotor Shaft | 784.48 | 1 |
| 23 | LB-1213 | Adaptor Plate to Pump Housing Fixing | | 8 |
| 24 | LW-3001 | Flat Washer | | 4 |
| 25 | LW-3101 | Spring Washer | | 4 |
| 26 | LN-2000 | Nut | | 4 |
| 27 | L-10/15-R-SK-2 | Rotor Shaft Key | | 1 |
| 28 | LB-1214 | Rotor to Motor Fixing | | 1 |
| 29 | LB-3000 | Flat Washer | | 15 |
| 30 | LB-3100 | Spring Washer | | 15 |
| 31 | LB-1255 | Roller Carrier Fixings | | 4 |
| 32 | LB-1256 | Roller Shaft Fixings | | 2 |
| 33 | LB-1003 | Front Cover Fixings | | 11 |
| 34 | L10 L15 Gearbox and Motor Assembly | | | 1 |
| 35 | L-10-R-GC-1 | Gearbox Clamp Washer | 54.22 | 1 |
| 36 | LB-1014 | Gearbox to Rotor Shaft Fixing | | 1 |
| 37 | L-10-HC-CS-1 | Sealing Washer | 1.74 | 2 |
| 38 | L-10-HC-C-1 | Hose Connector Collar | 30.71 | 2 |
| 39 | L-10-HC-1 | Hose Connector 1/4" BSP | 128.49 | 2 |
| 40 | LN-4101 | Hose Connector Fixing | | 2 |

* 1 g = 0.0353 ounce / 0.0022 pound

** Recommended spares with 0.75 litres of Envirolube Lubricant.



Exploded View for L15 Series Pump

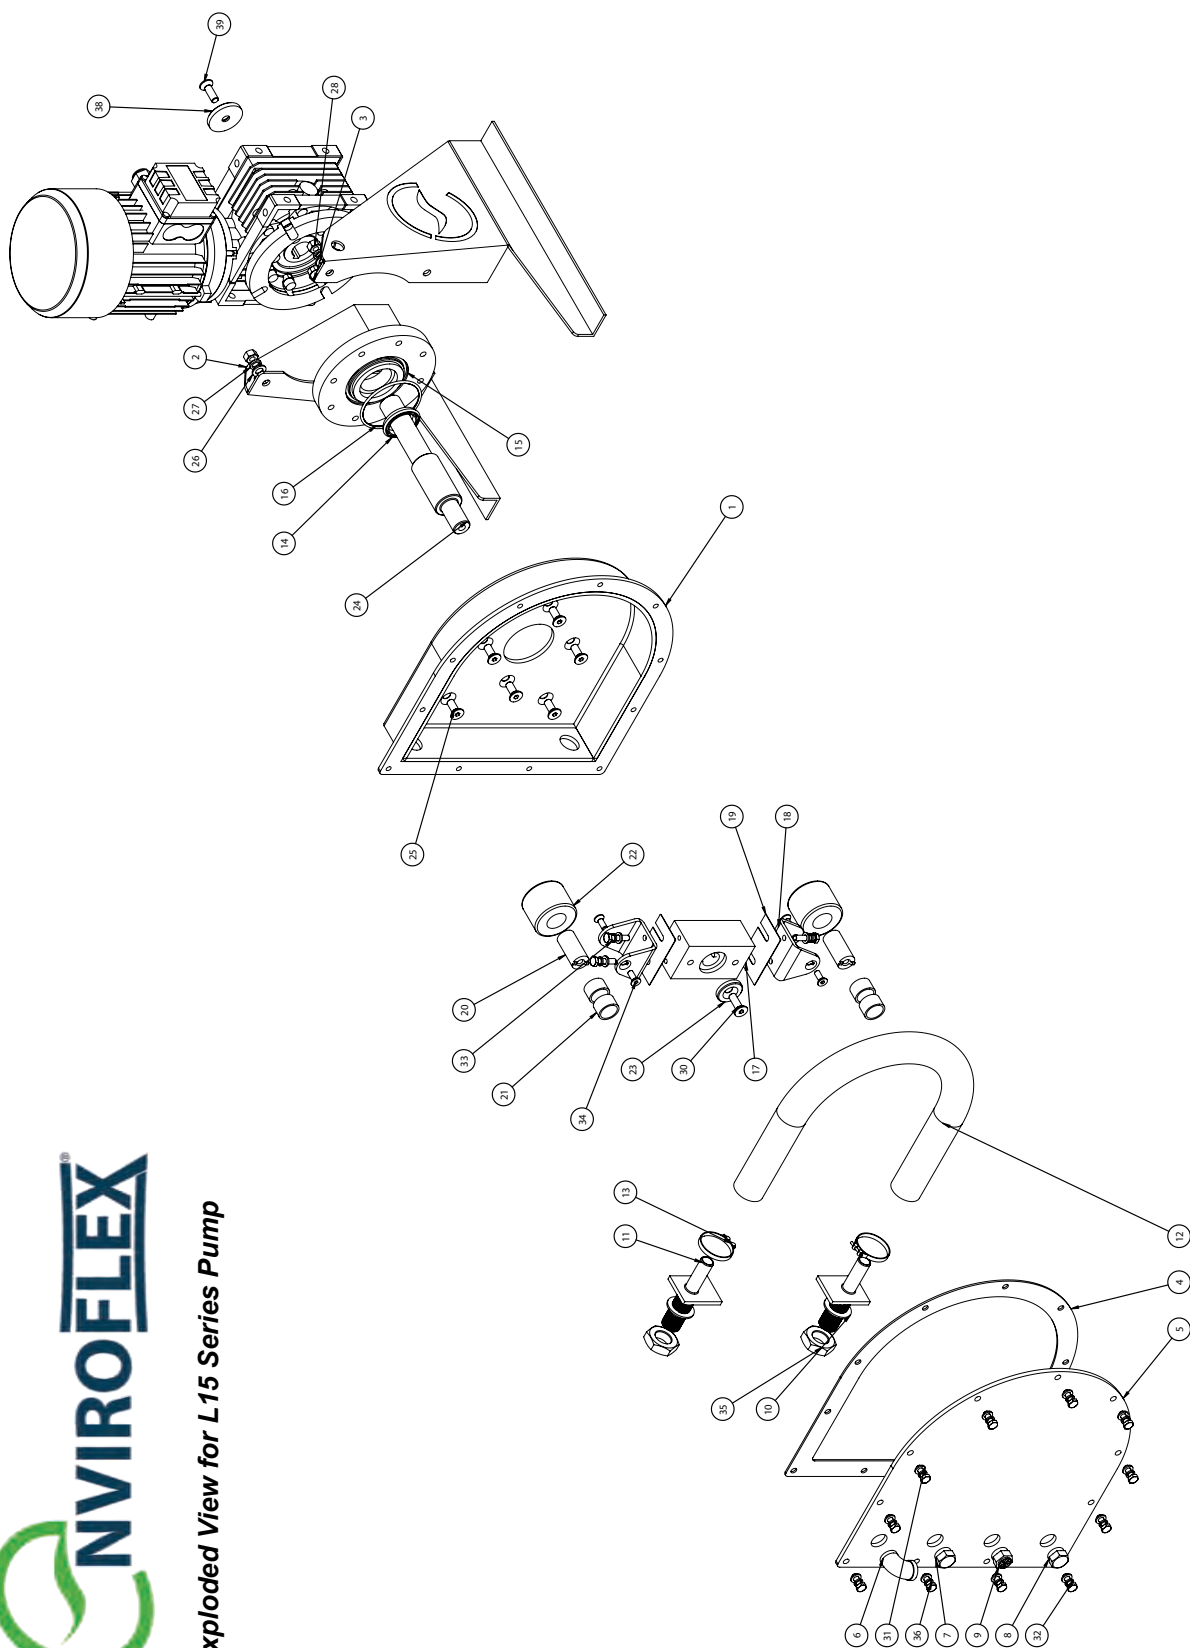

L15 Series Pump Parts List

| Item No. | Part Number | Description | * Weight (gramme) Per Unit | Qty. |
|----------|------------------------------------|---|----------------------------|------|
| 1 | L-15-PH-1 Pump Housing | Housing Body | 4695.63 | 1 |
| 2 | L-15-F-L-1 | Pump Frame Left | 1252.29 | 1 |
| 3 | L-15-F-R-1 | Pump Frame Right | 1252.28 | 1 |
| 4 | L-15-FC-DS-1 | Front Cover Door Seal | 60.21 | 1 |
| 5 | L-15-FC-1 | Front Cover | 3095.61 | 1 |
| 6 | LT-5000S | Breather Elbow | 32.75 | 1 |
| 7 | LP-1003 | Fill Plug | 9.52 | 1 |
| 8 | LP-1004 | Drain Plug | 9.52 | 1 |
| 9 | LT-5012 | Sight Glass | 9.86 | 1 |
| 10 | L-15-50 | Sealing Washer | 1.62 | 2 |
| 11 | L-15-HC-1 | Hose Connector 1/2" BSP | 189.16 | 2 |
| 12** | L-15-NRH | Pump Hose - NATURAL RUBBER | 395.75 | 1 |
| | L-15-NRH-FG | Pump Hose - NATURAL RUBBER (FOOD GRADE) | 395.75 | 1 |
| | L-15-NIT-IND | Pump Hose - NITRILE (INDUSTRIAL) | 395.75 | 1 |
| | L-15-NIT-FG | Pump Hose - NITRILE (FOOD GRADE) | 395.75 | 1 |
| | L-15-EPDM | Pump Hose - EPDM | 395.75 | 1 |
| | L-15-HYP | Pump Hose - HYPALON | 395.75 | 1 |
| 11** | LC-4014 | Hose Clip | 7.00 | 2 |
| 14 | LS-6000 | Drive Protection Seal | 3.00 | 1 |
| 15 | L-15-GB-MF-1 | Gearbox Adaptor Plate | 670.74 | 1 |
| 16 | LS6808 | Gearbox Mounting O Ring | 1.79 | 1 |
| 17 | L-15-R-1 | Rotor | 420.70 | 1 |
| 18 | L-15-R-C-1 | Roller Carrier | 149.09 | 2 |
| 19 | L10-SH-3 / L15-SH-4 | Shim 0.6mm / Shim 1.0mm | 11.91 | 4/8 |
| 20 | L15-ROL-SH-1 | Roller Shaft | 89.20 | 2 |
| 21 | L-15-ROL-B-1 | Roller Bush | 2.38 | 4 |
| 22 | L-15-ROL-1 | Roller | 67.34 | 2 |
| 23 | L-15-R-RC-1 | Roller Clamp Washer | 22.37 | 1 |
| 24 | L-10/15-R-RS-5 | Rotor Shaft | 784.48 | 1 |
| 25 | LB-1213 | Adaptor Plate to Pump Housing Fixing | | 8 |
| 26 | LW-3001 | Flat Washer | | 4 |
| 27 | LW-3101 | Spring Washer | | 4 |
| 28 | LN-2000 | Nut | | 4 |
| 29 | L-10/15-R-SK-2 | Rotor Shaft Key | | 1 |
| 30 | LB-1014 | Gearbox to Rotor Shaft Fixing | | 1 |
| 31 | LB-3000 | Flat Washer | | 15 |
| 32 | LB-3100 | Spring Washer | | 15 |
| 33 | LB-1255 | Roller Carrier Fixings | | 4 |
| 34 | LB-1256 | Roller Shaft Fixings | | 4 |
| 35 | LN-4101 | Hose Connector Fixings | | 2 |
| 36 | LB-1003 | Front Cover Fixing | | 11 |
| 37 | L10 L15 Gearbox and Motor Assembly | | | 1 |
| 38 | L-15-R-GC-1 | Gearbox Clamp Washer | 54.22 | 1 |
| 39 | LB-1014 | Gearbox to Rotor Shaft Fixing | | 1 |

* 1 g = 0.0353 ounce / 0.0022 pound

** Recommended spares with 0.75 litres of Envirolube Lubricant.

User Guide

Troubleshooting

If the pump does not appear to be functioning correctly, consult the following guide to see if you can identify and remedy the problem yourself. If the problem still persists, please contact Enviroflex Limited or your authorised local dealer for more detailed information

| Problem | Probable Cause(s) | Suggested Remedy |
|--|--|---|
| The pump does not start when turned on. | Defective motor | Check motor is running Check fuses. Check motor protection switch. Make sure that all phases have required voltage |
| | Frequency inverter (when used) incorrectly set-up | Connect motor DOL Check inverter settings |
| | Shaft key broken or missing | Make sure that a key is fitted and that all surfaces of friction are clean and undamaged. The hub screws re correctly tightened |
| | Pump rotating in reverse | Check direction of the motor is correct |
| | The pump is taking in air | Identify the source of air intake and exchange seals or gaskets |
| | Rollers are not adjusted correctly | Adjust the roller occlusion |
| Pump runs but there is no flow of media. | Hose blocked | Reverse the pumps rotation and remove any obstacles. If this is not possible with your system, the pump needs to be disassembled and obstacles removed. |
| | Pipeline on suction side of the pump is clogged | Clean pipeline, valves, filters etc. |
| | Pump has pumped against excessive pressure and hose has detached from hose connector | Remove reason for overpressure, fit overpressure protection, check pump for damage and reattach hose and refill lube |
| Flow is less than calculated | Pump is running too slow | It maybe possible to fit a speed inverter or make a gear ratio change (not always possible). Call Enviroflex Limited to discuss |
| | The pump is taking in air | Locate the source of air intake and exchange seals or gaskets |
| Flow is less than calculated | Restriction in the suction pipe | Identify and remove the restriction |
| | Viscosity is too high for the size of pump | Turn down the pump speed and/or utilise a larger pump |

| Problem | Probable Cause(s) | Suggested Remedy |
|------------------------------------|--|---|
| Flow is less than calculated | Rollers are not adjusted correctly | Adjust the roller occlusion |
| | Backpressure is too high | Change the pipeline on the pressure side of the pump |
| | Suction pipe is too long for the diameter creating too high suction pulsation losses | Consult Enviroflex Limited |
| Noise | Pump cavitating | Lower the speed or utilise a bigger pump or change the pipelines |
| | Air or gas in the pipelines | Seal of possible air intakes |
| | Pressure too high | Clear pipelines and check pipe sizes Lower the pumping speed |
| | Rollers are not adjusted correctly | Adjust the roller occlusion |
| | Gearwheels or bearings worn out | Workshop overhaul of pump needed |
| | Hose damaged | Exchange the hose |
| | Suction and discharge lines not correctly fastened | Fasten correctly |
| Vibration of the pump and pipework | High pump speed with long suction and discharge lines or high product specific gravity or a combination of these factors | Reduce pump speed. Reduce the line lengths on both suction and discharge where possible. Consult Enviroflex Limited |
| | Too small diameter of suction and/or discharge pipework | Increase the pipework size |
| | Pressure too high | Check discharge pressure is as per pump data sheet. Check pump speed is as per pump data sheet. Check pipelines are clear Check pump hose is not damaged (New installation) Check pipes sized correctly |
| Pump draws too much current. | Sedimentation of solid substance when not using the pump | Empty the pump after use, flush the pump with clean water after use |
| | Fluid or particle buildup in or by the motor | Clean the motor |
| | High pump speed | Reduce pump speed or install larger pump |
| Short Hose life | Hose deteriorating chemically | Reassess the choice of material for the hose |
| | High pulsations | Consult Enviroflex Limited for detailed advice |
| | Incorrect hose lubricant used | Use only Envirolube lubricant |
| Pump parts wearing quickly | Hose wearing mechanically on the outside | Check compression roller occlusion |

| Problem | Probable Cause(s) | Suggested Remedy |
|----------------------------|--|---|
| Pump parts wearing quickly | Hose wearing mechanically on the inside | Check compression roller occlusion |
| | Roller bearings (bushings) wear down quickly | Check compression roller occlusion |
| | Abrasive product mixed in the hose lubricant | Wash out pump body and change lubricant. Ensure pump body is fully cleaned when replacing a failed hose |
| High pump temperature | Incorrect hose lubricant used | Use only Envirolube lubricant |
| | Product temperature too high | Consult Enviroflex Limited |
| | Pump running too fast | Reduce pump speed |
| | Partial blockage in the suction pipe | Dismantle the suction piping, identify the restriction and remove |
| Lubricant leakage | Leaking seal or gasket | Identify the leaking seal or gasket. Tighten retaining bolts. Replace seal or gasket if needed |

For trouble free pump operation, please refer also to the Routine Maintenance instructions as detailed earlier in this manual.

Specifications

Pump operating conditions

| Description | L10 | L15 |
|--|------------------|-------|
| Max continuous flow (m ³ /hr) | 0.21* | 0.42* |
| Capacity per revolution (l/rev) | 0.05 | 0.10 |
| Maximum working pressure | 7.5 Barg* | |
| Ambient working temperature | -10°C to +40 °C | |
| Product working temperature | -10°C to +80 °C* | |
| Sound level at 1m | < 70 dB(A) | |

* Your pump may not have been configured to run at these stated maximums. Please check your Technical Data Sheet.

Materials of Construction

| Description | Standard | Optional | |
|---------------------|-------------------|--------------|--------------|
| Pump Body | 304 st. stl | 316 st. stl. | |
| Front Cover | 304 st. stl | 316 st. stl. | |
| Rotor | Aluminium / Steel | 304 st. stl | 316 st. stl. |
| Compression Rollers | POM | | |
| Hose Connectors | 304 st. stl | 316 st. stl. | |
| Support Frame | 304 st. stl | 316 st. stl. | |
| Main Gasket | Nitrile | | |
| Fasteners | MS BZP | 304 st. stl | |

Hose Lubricant Quantities

| | L10 | L15 |
|-----------------------------------|------------|------------|
| Volume of hose lubricant (litres) | 0.75 | 0.75 |



Contact Enviroflex Limited or your authorised local dealer should you require a Material Safety Data Sheet (MSDS) for Enviroflex Roller Lubricant.

Weights and Dimensions

The details below are approximate only. Please refer to your Technical Data Sheet or Enviroflex Limited for specific details of the supplied equipment.

| | L10 | L15 |
|-------------------|----------------|----------------|
| Net weight (kgs) | 30 | 30 |
| Overall size (cm) | 490Hx335Wx309L | 490Hx335Wx309L |

Recommendations for Hose Storage

We recommend that pump hoses are stored in accordance with BS3574. Peristaltic Hoses can be considered as Group A products as detailed in this specification, i.e. products with moderate susceptibility to deterioration. The relevant points from this specification are:

| | |
|------------------------|---|
| Temperature: | To be below 25°C and articles stored away from direct sources of heat such as boilers, radiators and direct sunlight. For articles stored below 15°C their temperature should be raised to approx. 30°C throughout their mass prior to use. |
| Humidity: | Humidity shall be such that condensation shall not occur. The criterion for this is that either the storage temperature should be above the dew point or humidity levels should be low enough to ensure the dew point is below the storage temperature. |
| Light: | Protect from strong light sources, in particular direct sunlight or intense artificial light having a high ultraviolet content. |
| Ozone: | Storage areas shall not contain equipment which generates ozone - e.g. mercury vapour lamps, high voltage electrical equipment, combustion gases, organic vapours. |
| Deformation: | Store free from superimposed tensions or compression. For a hose this means that the supports must be wide enough and spaced in a way as to spread the load over a wide area. We would recommend a minimum width of 100mm for any support spaced no more than 500mm apart. It is preferable that hoses are supported over their entire length. Do not store hoses coiled. |
| Contact with Liquids: | Do not allow contact with liquids (e.g. petrol, greases, acids, disinfectants, cleaning fluids). |
| Contact between Hoses: | Avoid direct contact between hoses of different types, particularly between hoses of different colours. |
| Rotation of Stock: | Hoses must be issued in strict rotation by manufacturing date or production code. |

Hoses will be delivered wrapped individually in opaque polythene, we would recommend that the packing is kept on the hoses prior to use to reduce the effects of light and to minimise contact with other materials. Individual hoses are marked with a production code identifying the manufacturing period.

EC Declaration of Conformity

In accordance with EN ISO 17050-1:2004

We
of

Enviroflex Ltd
Pump Point, Ascot Drive, Derby, DE24 8GZ

in accordance with the following Directive(s):

| | |
|-------------|---|
| 2004/108/EC | The Electromagnetic Compatibility Directive |
| 2006/42/EC | The Machinery Directive |

hereby declare that:

| | |
|-----------|------------------|
| Equipment | Peristaltic Pump |
| Models | L10, L15 |

is in conformity with the applicable requirements of the following documents

| Ref. No. | Title | Edition/date |
|-------------------|---|---------------|
| BS EN ISO 12100-1 | Safety of machinery. Basic concepts, general principles for design. Basic terminology, methodology | 2003 |
| BS EN ISO 12100-2 | Safety of machinery. Basic concepts, general principles for design. Technical principles | 2003 |
| BS EN 809 | Pumps and pump units for liquids. Common safety requirements | 1998 |
| BS EN 60204-1 | Safety of machinery. Electrical equipment of machines. General requirements | 2006 +A1:2009 |
| BS EN 61000-6-1 | Electromagnetic compatibility (EMC). Generic standards. Immunity for residential, commercial and light-industrial environments | 2007 |
| BS EN 61000-6-3 | Electromagnetic compatibility (EMC). Generic standards. Emission standard for residential, commercial and light-industrial environments | 2007 |

I hereby declare that the equipment named above has been designed to comply with the relevant sections of the above referenced specifications and is in accordance with the requirements of the Directive(s)

Signed by: 

Name: D Gascoyne

Position: Director

at Pump Point, Ascot Drive, Derby, DE24 8GZ

Date 29th August 2024



The technical documentation for the machinery is available from the manufacturer at the above address.

Product Use Declaration Form

| Product Use Declaration Form | | | | | |
|--|--|----|----|--|---------|
| <p>In compliance with the Health & Safety Regulations and the Control of Substances Hazardous to Health Regulations you, the user are required to declare the substances which have been in contact with the product(s) you are returning to Environmental Pumping Solutions Limited or any of its subsidiaries or distributors. Failure to do so will cause delays in servicing the item or in issuing a response. Therefore, please complete this form to ensure that we have the information before receipt of the item(s) being returned. A FURTHER COPY MUST BE ATTACHED TO THE OUTSIDE OF THE PACKAGING CONTAINING THE ITEM(S) before returning. You, the user, are responsible for cleaning and decontaminating the item(s) before returning them.</p> | | | | | |
| Please complete a separate Declaration Form for each item returned. | | | | | |
| Company: | | | | | |
| Address: | | | | | |
| | Postcode: | | | | |
| Telephone: | Fax Number: | | | | |
| e-mail: | | | | | |
| Product: | Cleaning fluids to be used if residue product is found during servicing: | | | | |
| Serial Number: | 1. | | | | |
| Has the Product been used? | 2. | | | | |
| <table border="1"><tr><td>YES</td><td></td><td>NO</td><td></td></tr></table> | YES | | NO | | 3. |
| YES | | NO | | | |
| | 4. | | | | |
| If yes, please complete all the following sections | | | | | |
| If no, please complete declaration only | | | | | |
| Details of Substances Pumped | | | | | |
| Chemical names: | | | | | |
| 1. | I hereby confirm that the only substance(s) that the item specified has handled or come into contact with are those named, that the information given is correct, and the carrier has been informed if the consignment is of a hazardous nature. | | | | |
| 2. | | | | | |
| 3. | | | | | |
| 4. | | | | | |
| Precautions to be taken when handling the above: | | | | | |
| 1. | Signed: | | | | |
| 2. | Name: | | | | |
| 3. | Position: | | | | |
| 4. | Date: | | | | |
| Action to be taken in the event of human contact: | | | | | |
| 1. | Any other additional information you may regard as useful: | | | | |
| 2. | | | | | |
| 3. | | | | | |
| 4. | | | | | |