

Contents:

Introduction	4
General	4
Safety	5
Intended Use	5
Warranty Conditions.....	6
Description	6
Operation of the pump.....	6
Pump hose	7
Hose Lubrication	7
Drive systems	8
Available options	8
Installation	9
Unpacking	9
Storage.....	9
Locating the Pump	9
Connecting the Pipework	10
Pulsations.....	11
Lifting the Pump	12
Mounting the Pump	12
Electrical Connection	12
Use of Frequency Inverters	13
ATEX Approved Units	13
Commissioning.....	14
Prestart-up Checks.....	14
Start-up Checks.....	14
Maintenance	15
Routine Maintenance	15
Cleaning the pump Hose.....	16
Hose Removal.....	16
Replacing the Roller Bushes	17
Adjusting the Compression Rollers	18
Fitting the Pump Hose.....	18
Fitting the Front Cover	21

Rotor Removal	21
Gearbox Drive Removal	21
Gearbox Drive Replacement	22
Rotor Replacement	22
Hose Connector Assembly	22
Parts List & Sectional Drawing	22
User Guide	26
Troubleshooting	26
Specifications	28
Pump operating conditions	28
Materials of Construction	28
Hose Lubricant Quantities	29
Weights and Dimensions	29
Recommendations for Hose Storage	30
EC Declaration of Conformity	31
Product Use Declaration Form	32

Contact Information:

Manufacturer

Enviroflex Limited
Pump Point
Ascot Drive
Derby
DE24 8GZ

www.enviroflexpumps.com

Tel: 01332 913200 Fax: 01332 653500

International Tel: +44 (0) 1332 913200
International Fax: +44 (0) 1332 653 500

Manual Revision February 2024

Authorised Distributor

The information contained in this document is believed to be correct but neither Environmental Pumping Solutions nor its distributors or representatives accept any liability for any errors or omissions and reserves the right to alter any specifications without notice.

This manual is owned by Environmental Pumping Solutions Limited and may not be reproduced by any means in part without their written consent. Reproduction by the user for the purposes of Installation, Operation and Maintenance of their L Series peristaltic pump only excepted.

Copyright 2024 All rights reserved.

Introduction

Thank you for choosing a quality pump from Enviroflex Limited.

Critical information before start up:



For safety reasons and in order for you to get the full usage of your new pump, it is necessary to read this manual thoroughly before putting it into service.

Ensure all commissioning checks on page 14 have been carried out

Within 7 days of delivery and before mounting and installing the pump please make sure that the unit corresponds exactly to that ordered and has not been damaged during transport.

This manual is divided into 4 parts:

1. **Introduction** to give the user an overview of the pump and this manual.
2. **Installation Guide** for installing or uninstalling and commissioning the pump.
3. **Maintenance Guide** for maintenance, repair or troubleshooting.
4. **User Guide** for daily use of the pump.

The L series pump range provides a high quality product that is designed to provide reliability, low energy consumption and low maintenance costs.

Enviroflex Limited supplies the complete range of peristaltic hose pumps including 10mm (3/8"), 15mm (1/2"), 20mm (3/4"), 25mm (1"), 32mm (1 1/4"), 40mm (1 1/2"), 50mm (2"), 65mm (2 1/2"), 80mm (3"), 100mm (4") and 150mm (6").

General


These instructions are intended as a reference book by means of which qualified users are able to install commission and maintain Enviroflex Limited L series peristaltic pumps. These instructions do not absolve the user of responsibility for carrying out work in accordance with good engineering practices and adherence to local Health & Safety regulations.

Documentation on the drive system used with the pump is not included within this manual. Reference must be made to separate documentation for the drive system, and its recommendations and instructions strictly observed.

For further information specifically about the L series range of peristaltic pumps which is not found within these instructions, please contact Enviroflex Limited, or your authorised local dealer. Please ensure you have the following data at hand:

- serial number of the pump
- material of the pump hose
- serial number of the drive gearbox and motor

Identification plates are mounted on the pumphead, drive gearbox and electric motor.

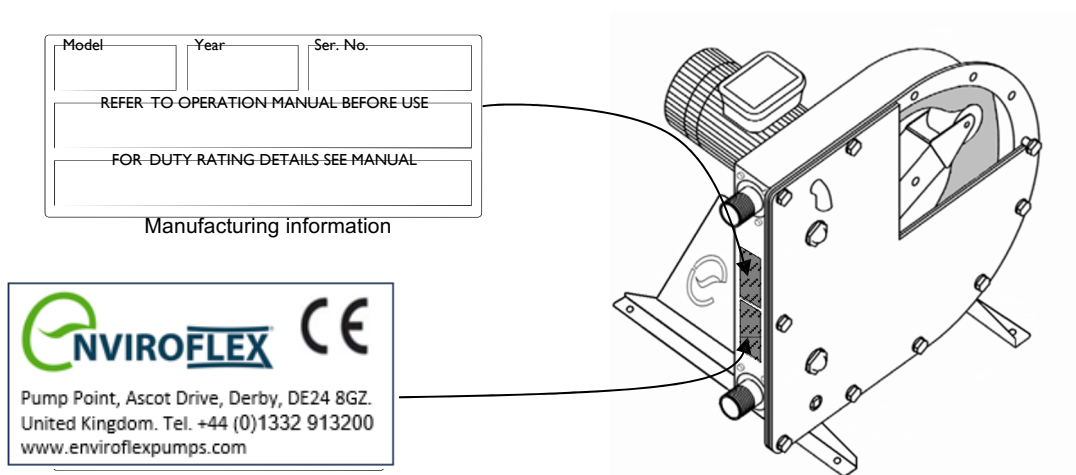

Suppliers Information

Labels fixed to the pump body contain model type, year of manufacture, product serial number and manufacturer's details.

	<p>SAFETY</p> <p>In these instructions the following symbols are used:</p>
	<p>WARNING</p> <p>Procedures, which, if not carried out with the necessary care, may result in serious damage to the pump equipment or in serious bodily harm.</p>
	<p>CAUTION</p> <p>Procedures not carried out with the necessary care, may result in serious damage to the pump equipment, the surrounding area or the environment.</p> <p>Remarks, suggestions and advice.</p>

During installation & maintenance all personnel should ensure they wear suitable personal protection equipment (PPE) such as safety glasses, gloves, safety boots and safety helmets as appropriate.

Intended Use

Enviroflex Limited L series peristaltic pumps are designed exclusively for pumping suitable products as defined in the technical data sheet supplied with your final quotation. Every other or further use is not in conformance with the "intended use" as laid down in EN 292-1.⁽¹⁾ The manufacturer cannot be held responsible for damage or harm resulting from use other than the "intended use".

If you wish to change the application of your pump, please contact Enviroflex Limited or your authorised local dealer to establish if the change is appropriate for the supplied pump.

⁽¹⁾ The "Intended use" as laid down in EN 292-1 is "... the use for which the technical product is intended in accordance with the specifications of the manufacturer, inclusive of his indications in the sales brochure". In case of doubt it is the use which appears to be its intended use judging from the construction, execution and function of the product. Observing the instructions in the user's documentation also belongs to intended use.

Warranty Conditions

Unless stated otherwise in the Technical Selection Sheet provided at the time of pump selection, the manufacturer offers a two-year warranty on proper workmanship of all parts of the pump. Exclusion is made for normal wear and tear of consumables, such as pump hoses, lubricant, hose clamps, compression rollers, bearings and bushes, wear ring and seals, or parts which have been misused or damaged through negligence.

The warranty only applies if the pump has been used for the application specified in the technical selection sheet and according to the guidance in this manual. Operation at pressures outside of the range specified in the Technical Selection Sheet shall invalidate this warranty.

This manufacturer's warranty is null and void for any user who uses parts not of Enviroflex Limited original supply in their L series peristaltic pump (including use of an alternative hose lubricant).

The warranty is strictly a return to base warranty, which means that the pump is required to be returned to our UK factory by arrangement for any investigation, replacement or repair work. The cost of transport back to our factory is not covered by this warranty; however with any valid warranty claim all time, replacement parts and carriage back to the original delivery address are included.

Any parts to be returned to the manufacturer must be accompanied by a fully filled in and signed declaration form declaring the conditions of use and materials pumped. Parts which have been contaminated or which have been corroded by chemicals or other substances which can pose a health risk must be cleaned before they are returned to the manufacturer.

Furthermore, it should be indicated in the declaration form what specific cleaning procedures have been followed, and that the equipment has been decontaminated.

The declaration form is required for all items, even if the parts have not been used.

A Declaration Form can be found at the end of this manual.

Warranties purporting to be on behalf of Enviroflex Limited made by any person, including representatives of Enviroflex Limited, its subsidiaries, or its distributors, which do not accord with the terms of this warranty shall not be binding upon Enviroflex Limited unless expressly approved in writing by a Director of Enviroflex Limited.

Description

Operation of the pump

The heart of the L series peristaltic pump is a specially constructed pump hose which lies within the pump housing. (Upon pump installation both ends of this hose are connected to the suction and discharge lines). A rotor with two opposing compression rollers lies in the centre of the pumphead.

During pump operation the rotor rotates, with the compression rollers compressing the pump hose. This action "pushes" the pumped fluid through the hose, and as soon


as the compression roller has passed, the hose recovers to its original shape due to the mechanical properties of the material.

Simultaneously fresh pumped fluid is drawn into the hose behind the compression roller by the (continuous) turning motion of the rotor.

The second compression roller will subsequently compress the pump hose. Due to the continuous rotating movement of the rotor not only is new product sucked in, but the already present product is pushed out by the moving compression roller. When the first compression roller leaves the pump hose, the second compression roller has already closed the pump hose and the product is prevented from flowing back. This is known as the “positive displacement principle” pumping principle.

Pump hose

The pump hose is made of specially compounded rubbers, reinforced with nylon cords. The outer cover of the pump hose is always made of natural rubber, whilst the inner layer is supplied in a variety of materials to suit the product to be pumped.

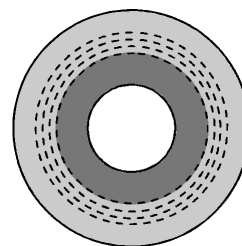

Dependent on the specific requirements of your application a corresponding pump hose must be selected. For each pump model various hose types are available.



Consult Enviroflex Limited or your authorised local dealer for more detailed information about the range of hoses available, and their chemical and temperature resistance.

Enviroflex Limited pump hoses have been carefully machined, to ensure minimum tolerances in wall thickness. It is very important to guarantee the correct compression of the pump hose, because over compression can cause too high a load on the pump and pump hose leading to reduced pump hose life and gearbox failure.

Under compression will result in loss of capacity and backflow resulting in reduced pump hose life.



Please refer to the maintenance section of this manual regarding adjustment of hose compression settings.

Hose Lubrication

The pumphead is part filled with our specially compounded Enviroflex Roller Lubricant. The lubricant lubricates the compression rollers and movement between the hose and the pump housing and the cover.

To those familiar with other types of peristaltic pumps utilising compressions shoes, our lubricant may appear thin, but this is essential in order to reach the roller bearings with maximum efficiency of lubrication.

Our lubricant is the result of decades of development and is perfectly mixed for use specifically in the L series pumps, ensuring the hose is fully lubricated at all times with no reaction on the hose material that would cause swelling and early hose failure.

Enviroflex Roller Lubricant will not freeze during cold weather.

Drive systems

The L series pumps described in this manual use a variety of drive types. Motors and gearboxes are selected according to the particular application for which the pump is applied.

Available options

The following options are available for the L series range of pumps:

- High (lubricant) level float switch (detects hose failure)
- Flanged pipework connections
- Complete stainless steel pumps

Installation

Unpacking

Upon unpacking of the pump check and inspect all items against the purchase order and packing list and for any damage caused during shipment. All claims for shortages and/or damage must be notified immediately to Enviroflex Limited.



Suitable lifting equipment must be used when handling components and assembling pumps.



ENVIRONMENT

When disposing of unwanted packaging materials, please consider the possibilities for reuse or environmentally friendly processing of packaging materials.

Always observe local regulations with respect to disposal of non reusable items.

Storage

After receipt and inspection, if pumps are not to be put into service immediately provision should be made for the pump to be rotated for a couple of turns on a weekly basis, ensuring the rollers are not allowed to come to rest in the same position consecutively. Alternatively one roller can be removed from the pump, leaving the remaining roller not in contact with the hose between the inlet and outlet ports.



Failure to adhere to the above procedure may result in a 'permanent set' of the hose which can result in reduced performance and premature hose failure.

Pumps that are to be stored for extended periods of time should have the hoses removed and stored in accordance with Enviroflex Limited recommendations. The pumps should be repackaged and placed in a suitable clean dry storage area free from excess moisture and vibrations. Protective blanking caps fitted before despatch from the factory should not be removed. Any unpainted surfaces not factory treated with a rust inhibiting coating should have a protective coating applied.

Where applicable, if pumps were supplied with electric motors fitted with anti-condensation heaters, these should be connected to a temporary supply and switched on throughout the storage period.

Locating the Pump



Before mounting the pump, make sure that all your site safety procedures have been reviewed and that any appropriate risk assessments have been completed.



Upon installation ensure that all markings on the pump will be clearly visible when installation is complete.

Ensure the pump is to be sited in an area where the ambient temperature during operation is not below -10° and above $+40^{\circ}\text{C}$.

Check that the foundation where the pump is to be mounted can carry the load of the pump. Also have the appropriate SWL marked lifting gear / crane ready for the given situation.

Ensure the foundation/floor surface is flat and horizontal. Minor irregularities in surface level can be accommodated by the use of shims placed under the support frame.

Ensure there is sufficient room around the pump to carry out the necessary maintenance activities. Particularly ensure the front cover door can be opened and a hose taken out and replaced (If it cannot, it may be possible to modify the door to remove the hinge if fitted, please enquire).

Ensure the installation environment is sufficiently ventilated allowing heat developed by the pump and drive to be discharged, particularly that the motor cowl has sufficient air to circulate to support cooling.


No special tools are required to install the L series pumps, other than ordinary hand-tools and a hammer/drilling machine for the installation of the foundation bolts.

Connecting the Pipework

It is recommended that the connection to a pipe system is made as a flexible joint. There are several flexible systems on the market which include both metallic and rubber systems.

By making a flexible joint, the risk of introducing vibrations into the complete pipe system is reduced. Vibrations may cause wear and in some cases fatigue fractures in the pipe system.

The pipework system must be independently supported and must not use the pump in anyway to support its weight (The pipe system must never hang by the connections of the pump).

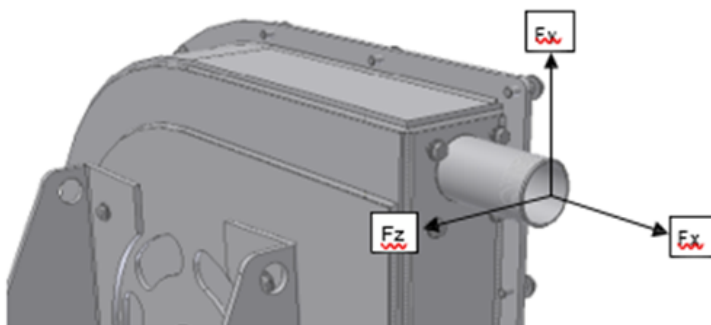

Permissible Load (N)		
	L100	L150
Fx	1800	1800
Fy	400	400
Fz	400	400

Suction line bore must be larger than the bore size of the pump hose. Discharge line bore must be the same or larger than the bore size of the pump hose.

Keep the suction and delivery lines as short and direct as possible.

Suction and discharge lines should preferably exit straight from the pump so that the pump is not pumping directly into a restriction for example a 90 degree bend, as this may cause the hose to come off. Where bends are used, ensure the radiuses are as large as possible. It is recommended to use Y-connections instead of T-connections.

Prevent any possibilities of exceeding the maximum working pressure of the pump. It is essential that you discuss this with your system designers in order to ensure safe system and pump operation. If necessary fit an overpressure protection device.



To avoid misunderstanding, protecting the motor against over current will not protect the pump from overpressure. Pump overpressure needs to be protected against independently using a pipeline mounted overpressure protection device.

All L series pumps have a pressure overflow connection found on the front of the pump above the lubricant fill plug. When the pump hose fails, liquid will come out of this overflow connector. If this is a potential safety or hygienic issue, the connector will need to be piped back to a safe location in a way that will not impede normal atmospheric pressure reaching the pump body during normal operation.



Consider the maximum permissible working pressure of the pump and pipework used.

Exceeding maximum working pressures may lead to serious damage.

Pulsations

Some systems require pulsation dampers to avoid excessive and damaging pressure spikes and vibrations. Situations that may lead to excessive pulsations and vibration are:

- incorrectly secured pipelines
- high pump speeds with long suction and delivery lines or the product SG is high
- pipeline bore is too small

Where unacceptable pulsations are encountered, it may be possible to install pulsation dampeners to alleviate the problems.



Dampeners need to be sized very carefully in order to protect the pump and system from excessive pressure peaks.

- Never use an existing dampener employed on another application or pump make and assume it will automatically work on an application with an L series pump. Different pump displacements and system characteristics often mean a dampener will not work effectively.
- Many dampeners are not suitable for variable speed applications. Where pump speeds and pressures vary, dampeners need to be carefully selected and sized to accommodate all the duty conditions.



Consult Enviroflex Limited or your authorised local dealer for more detailed information about the need and use of pulsation dampeners.

Lifting the Pump

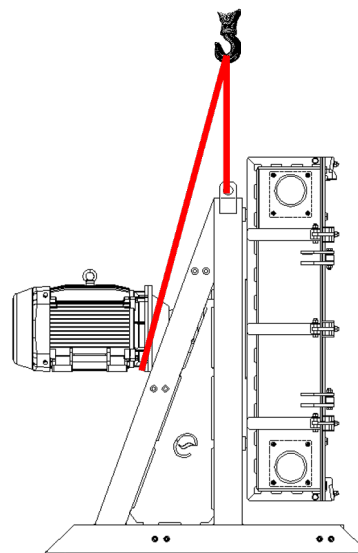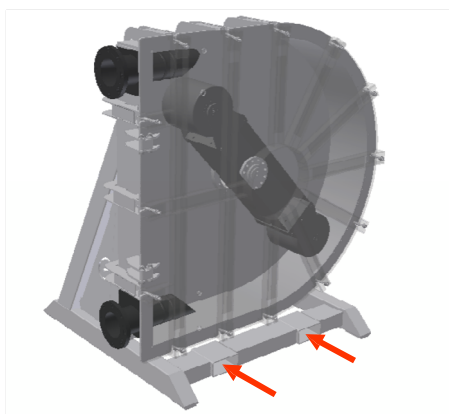

The complete pump may be lifted either with the use of a forklift truck by utilising the fork pockets in the pump frame, or by use of the lifting eyes on the pump frame.

Due to the selection of drives available the centre of lift will vary dependant upon the size and weight of the drive fitted. If desirable to lift the pump squarely an additional lifting strap may be positioned around the juncture of the gearbox and motor. The length of this will need to be adjusted to establish a level lift if so desired. Suitably rated lifting straps or slings only must be used. Gearbox and motor lifting eyes must not be used for lifting the complete pump unit.



When lifting the pump ensure that all standard lifting practices are adhered to and carried out by qualified personnel only.

If lifting with a forklift truck, ensure the forks are fully located through the complete pump frame

Mounting the Pump

The pump is fastened to the foundation via the holes in the frame or pump-chassis using suitable anchor bolts.

If the pump is to be mounted on rubber pads, it is very important that the connecting pipeline is fitted with a flexible joint.

Electrical Connection



Electrical connection of the pump must only be done by suitably qualified personnel.

The motor is to be thermally protected against overload by a protective circuit switch and is to have the correctly sized fuse according to the local existing rules and regulations.

Important:

In order to insure that the pump remains free of static electricity, the pump needs to be grounded. This is done via the grounding of the motor. The motor must be grounded with a wire of sufficient size!

For electrical connection details, please see the motor datasheet.

The pump should have its own dedicated electrical isolation switch meeting the requirements of BS EN 60947 - 3 (Switches, disconnectors, switch disconnectors and fuse combination units) so that it is not possible to start the pump during maintenance. There should also be an emergency stop button meeting the requirements of BS EN 60947 - 5 - 1 (Electro - mechanical control circuit devices) and BS EN 60947 - 5 - 5 (Electrical emergency stop devices with mechanical latching function.)

It is recommended to have local electrical control to the pump for use during commissioning and maintenance operations.

These electrical items should be installed according to the manufacturer's instructions by an electrician qualified to install electrical equipment on machinery.

If the pump is incorporated into a more complex installation then the installer should ensure the completed installation complies with the Machinery Directive 2006/42/EC.

Use of Frequency Inverters

The pump will not come with a motor that is suitable for use with a frequency inverter unless this has been stated on the pump technical data sheet.

Use of an inverter when no allowance has been made for one, can be dangerous and may lead to motor failure.

Where the use of an inverter has been specified on the pump technical data sheet it is essential that the control panel does not allow an operator to run the pump outside of the turndown design parameters there specified.

Frequency inverters used with peristaltic hose pumps must be of the constant torque type, and ideally sized at least one size larger than the pump fitted motor kilowatts.

ATEX Approved Units




Standard L series pumps must not be used in potentially explosive hazardous atmospheres (European Directive 94/9/EC -ATEX Directive). If you require a pump to operate in a hazardous area classification, please contact Environmental Pumping Solutions Limited or your authorised local dealer for more detailed information.

Commissioning

Prestart-up Checks

Before commissioning, carry out the following checks:

- Check the pipework connections, ensuring there is no undue strain on the pipework.
- Ensure that there are no obstructions such as closed valves in the pipework. It is advisable to flush the system through with water to clear any debris.

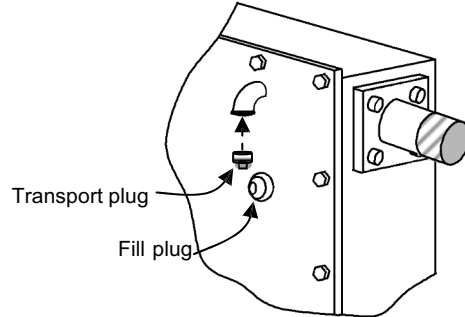

- Check the pump casing is filled to the correct level with Enviroflex Roller Lubricant. If necessary add lubricant. – **Before adding lubricant, check you have the correct hose lubricant; fill only with our Roller grade lubricant?**
- Check there is oil in the gearbox, and filled to the correct level.

It is advisable prior to powering up the pump to check rotation by hand to ensure there are no obstructions. This can be achieved as follows:

Isolate and lock off the electrical supply. Remove the motor fan cowl and turn the electric motor fan by hand to ensure free running. The motor should be rotated for enough turns to ensure the pump rotor has turned through 360 degrees. (If the gearbox ratio is 50:1, the motor fan must be rotated 50 revolutions). If any difficulties are found these should be investigated and rectified.

Start-up Checks

Prepare the electric motor for operation in accordance with the manufacturer's instructions, and ensure pump control panels are energised ready for operation.

When satisfied that all preliminary checks and procedures have been carried out, start up the pump.

Whilst running carry out the following checks:

- Check the rotation of the rotor.
- Check for any leaks in the system
- Check for excessive vibrations
- Check the pumping capacity of the pump.

Generally monitor the behaviour of the pumpset during the run period, ensuring that temperatures stabilise within the run period.

Check the integrity of the foundation holding bolts.

Following all start-up checks, if any items deviate from expected, refer to the "Troubleshooting" section of this manual or contact Enviroflex Limited, or your authorised local dealer.

Maintenance



Only use original Enviroflex Limited parts when maintaining the pump. Enviroflex Limited cannot otherwise guarantee correct functioning of the pump. Any consequential damage that occurs from the use of non-original components cannot be warranted.

Routine Maintenance

The L series pumps are designed to have the minimum of service and maintenance.

A small number of simple preventive measures are however needed in order to ensure continuous and trouble free pump life.

Important: it is very important, that the pump is maintained according to the table below.



Never clean or repair the pump without it being fully isolated.

When cleaning, maintaining or repairing the pump, the power supply to the motor has to be disconnected by means of a key locked switch.

Action	To be carried out	Comments
Check hose lubricant level	Before start-up and thereafter on a daily operational basis	Lubricant should be visible in the lower sight glass on the pump front cover
Check the pumphead for any lubricant leakage around the cover and the connections	Before start-up and thereafter on a daily operational basis	
Check pump for high temperature or unusual noise	On a daily operational basis	
Check compression rollers for wear	When replacing the pump hose	Replace if there is more than 1mm wear across the roller
Changing the hose lubricant	When replacing the pump hose	Only use Envirolube hose lubricants
Check gearbox oil level	Before start-up and thereafter on a daily operational basis	
Replacing the gearbox oil	Refer to the gearbox manufacturers instructions	

In certain installations it may be desirable to try and change the pump hose before failure on a routine scheduled basis. If this is the case, we suggest changing the hose after 75% of the time the first hose lasted.

Due to the variety of motor and gearboxes supplied according to both application and client requirements, maintenance detail is not shown in this manual. Please refer to the manufacturer's manual for maintenance detail on your specific drive.

Cleaning the pump Hose

The inside of the pump hose is easily cleaned by flushing with water or any other compatible cleaning fluid. Ensure that the pump hose can not only resist the chemical compatibility of any cleaning fluids, but also the temperature of cleaning liquid used.

Cleaning systems must not generate pressures in excess of the pump operating design pressure.

Hose Removal



When pumping potentially hot, hazardous or dangerous media, it is critical to ensure that personnel are adequately protected during hose removal and that the hose is washed through with a media harmless to man and the environment before the hose is dismantled.



There can be a significant pressure difference between the upper and the lower pump connections. This can mean that while having vacuum in one connecting pipe there can be a large overpressure in the other connecting pipe. It is therefore essential that the pipework is depressurised safely prior to opening the pump cover and dismantling the hose.

Before dismantling any items, shut off the suction and discharge valves.

Drain the hose lubricant by positioning a container at the base of the pump, remove the top fill plug, remove the drain plug at the bottom of the pump and drain the lubricant into the container.




Always dispose of used lubricant in safe and proper manner. Refer to local Environmental restrictions as appropriate.

Unbolt the pump front cover and swing open on its hinges.

There are two options of hose removal with the L series pumps. Either the complete hose and inserts can be removed as one element assembly, or the hose can be removed with the inserts left in the pump.

With both methods of hose removal we suggest that one of the compression rollers is removed. To remove a roller ensure the roller is not in contact with the hose, remove the roller spindle screw and screws holding the roller side plate in place and lift the roller out. Rotate the rotor so that the remaining roller lies between the inlet and outlet ports. The hose can then be removed and a new one inserted easily without having to rotate the rotor. To refit the compression roller, rotate the rotor 180° so that the roller to be replaced lies between the inlet and outlet ports.

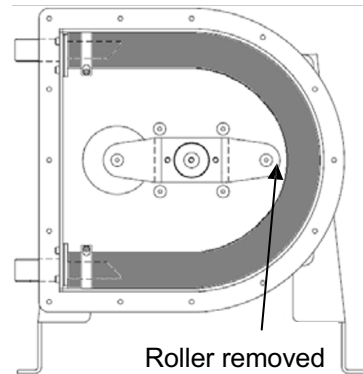


Removing the hose as an Element Assembly

First disconnect suction and discharge piping

Remove the insert retaining bolts from both hose inserts

Lift the hose element assembly out of the pump, withdrawing the inserts through the pump body.

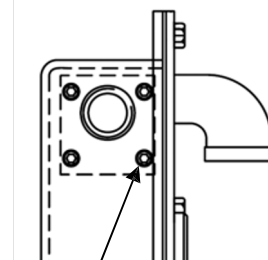

Insert retaining bolts

Removing the hose only

Note: There is no need to disconnect the suction and discharge piping when removing the hose only via this method.



Where difficulty pulling the hose off the connectors is encountered, try cutting the hose along the side of the connector as shown.

Carefully loosen top and bottom hose clamps.



From the bottom hose connector pull the hose off and out as far as possible. Continue pulling out the old hose until you have arrived at the top hose connection and finally pull the hose off this connection.

Check mechanical parts, such as Rollers, bushings and shafts for damage or wear.

Clean all components thoroughly, flushing with clean water if necessary. Pay particular attention to any residue of pumped material. Deposits of any abrasive media left within the pump body will be detrimental to future component life.

Check before replacing the hose that it is the correct diameter, and material and measure the exact thickness of the hose and note this down. This is needed if adjustment of the rollers is needed.

Before fitting the new hose, we recommend you check the compression roller occlusion setting to ensure optimum pumping efficiency throughout the pump life.

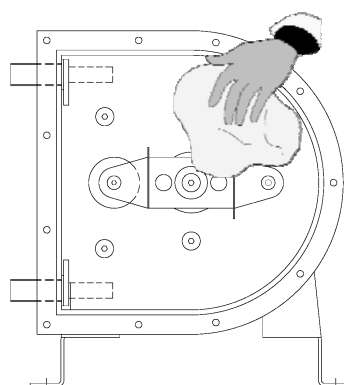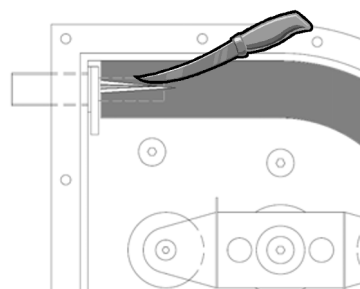

When ordering spare parts, please make reference to the serial number on the nameplate.

Replacing the Roller Bushes

With the hose removed, remove the compression rollers if not already done so, by removing the roller spindle screw and lifting the roller out of the roller carrier.

Using a suitable mandrel, press the old bushes out of the roller.

Lightly lubricate the outer surfaces of the new bushes and press into place, ensuring the face of each bush is flush with the face of the roller each side.

Refitting the roller is a reversal of the removal process.

Adjusting the Compression Rollers

The distance 'A' between the inner face of the pump body housing, and the compression roller should be set according to the following formula:

$$A = (2 \times t) - t_1$$

(at pressures 0 to 5 bar)

When the application pressure is to exceed 5 bar, subtract $0,25 \times t_1 \times P_d$

Variable	Value
A	Distance from roller to pump housing, see Figure 1
t	Thickness of the hose wall, see Figure 2
t1	Material dependent scale, see below
Pd	Nominal working pressure on the pump.

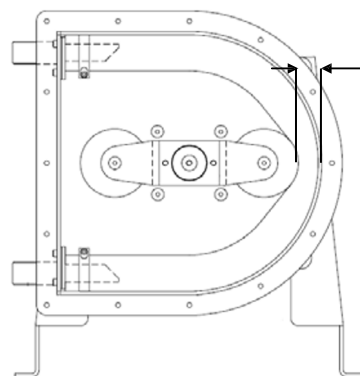


Figure 1 Distance from roller to pump housing

Example:

Hose thickness $t = 14$ mm

Hose material NBR $t_1 = 1.0$ mm

Working pressure $P_d = 7$ bar

$A = 2 \times 14 - 1.0 = 27.0$ mm

Subtraction from higher working pressure:

$0.25 \times 1.0 \times 7 = 1.75$ mm

$A = 27.0 \text{ mm} - 1.75 = 25.25 \text{ mm}$

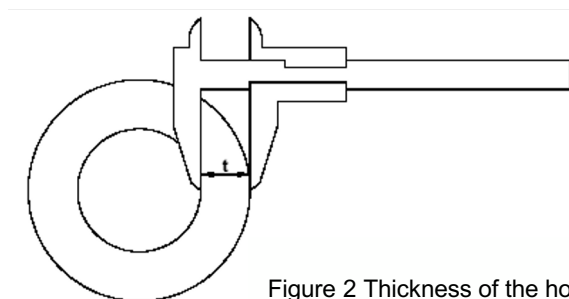


Figure 2 Thickness of the hose

Hose material	Scale: t_1	Hose material	Scale: t_1
Natural rubber	1,5 mm	Butyl	1,0 mm
NBR (Nitrile)	1,0 mm	Hypalon (CSM)	1,0 mm
EPDM	1,0 mm	Neoprene	1,0 mm

To adjust the compression roller gap shims should be inserted under the roller carrier. Additional shims of 0.5mm and 1.0mm thickness are available from Enviroflex Limited or your authorised local dealer.



The above procedure is intended as a guide only. After carrying out operational tests as detailed later in these instructions it may be found necessary to further adjust the rollers to decrease the distance 'A'.



Should it be found necessary to further adjust the rollers to decrease the distance 'A', this should be done in increments of 0,5 mm. If the rollers are adjusted too much, over occlusion of the hose will occur. Hose over occlusion is detrimental to hose life.

Fitting the Pump Hose



Take care when fitting the pump hose, there is a possibility of trapping hands if care is not taken.

Ensure the pump body housing is clean and free from foreign particles.

If not already removed, remove one of the compression rollers. To remove a roller ensure the roller is not in contact with the hose, remove the roller spindle screw and screws holding the roller side plate in place and lift the roller out. Rotate the rotor 180° so that the remaining roller lies between the inlet and outlet ports. The hose can then be inserted easily without having to rotate the rotor. To refit the compression roller, rotate the rotor 180° so that the roller to be replaced lies between the inlet and outlet ports.

Refitting the hose as an Element Assembly




Prior to installing a new element hose assembly, ensure that both hose inserts are aligned correctly. The hose inserts can only be fitted to the pump in one orientation, checking the correct orientation and alignment now will avoid delays later.

Correct alignment can be achieved by assembly on a flat surface ensuring both insert flanges sit flat on the surface whilst assembly takes place.



It is important to ensure correct alignment of the hose inserts. Misalignment will result in a twisted hose once the hose is fitted, leading to premature hose failure.

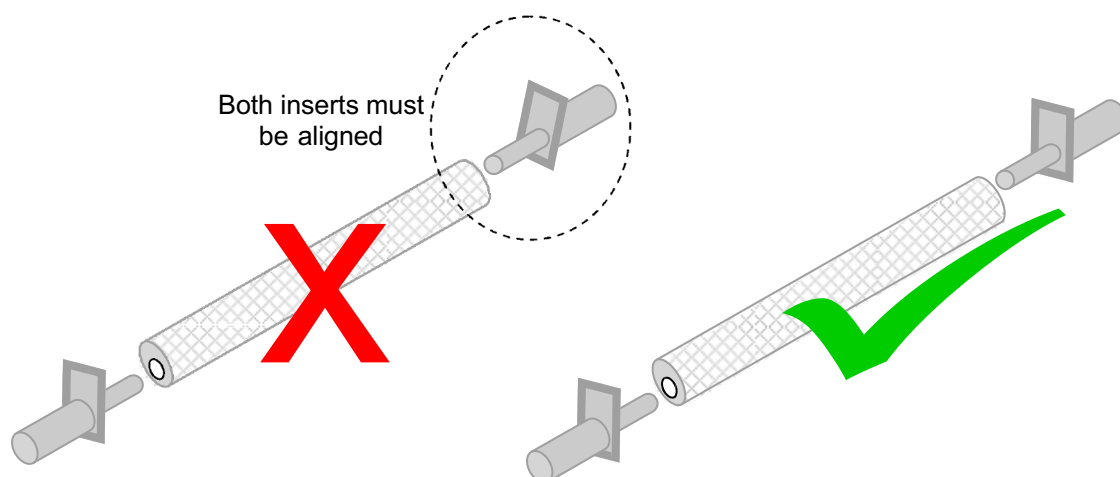

Push the hose onto the hose inserts along with the hose clamps – do not tighten clamps.



Aid assembly by lubricating inserts and hose bore with hose lubricant.



Never lubricate the hose, or any components in contact with the pump hose with mineral oils or lubricants, these are not compatible with the materials of hose construction.

Ensure the hose is pushed up to the insert flange on both connections, and that the inserts are in correct alignment.

Tighten both hose clamps and re check the insert alignment.



If the assembled hose element is not to be installed into the pump straight away, ensure the assembly is wrapped and stored in accordance with Enviroflex Limited recommendations.

Prior to fitting to the pump, ensure the hose assembly is clean and free from grit and particles on the outer cover.

Place the hose connector gasket over the outer connections.


Insert the hose element assembly in to the pump, passing the outer connections through the respective port in the pump body, with the gaskets on the inside of the pump body.

Insert and tighten the insert retaining bolts.

The hose must now be properly positioned in the pump housing as detailed below.



Failure to correctly position the hose may lead to premature hose failure.

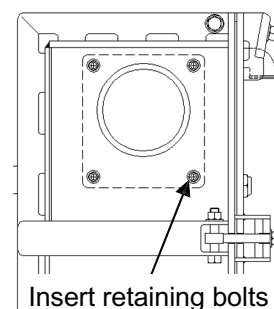

Refitting the hose only (inserts not removed)

Push the hose clamps and hose onto the top connector – do not tighten clamps.




To aid assembly, lubricate the hose connector and hose bore with a little hose lubricant.



Never lubricate the hose, or any components in contact with the pump hose with mineral oils or lubricants, these are not compatible with the materials of hose construction.

Push the hose over the bottom connector put the hose clamps over the hose - do not tighten clamps.

With the roller removed the hose can be pushed into the housing.

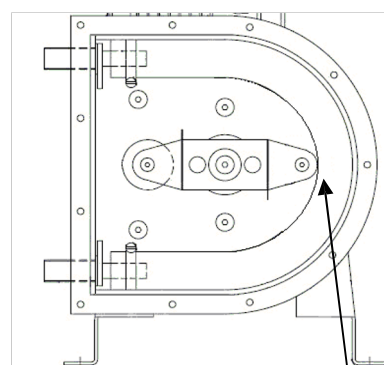

Roller removed


Positioning and Seating the hose

Ensure the hose clamps are loose. (If the hose was fitted as a complete element with inserts, it will be necessary to loosen the clamps.)

Push the hose firmly into the “U” arc of the pump body, ensuring contact is made with the hose and pump body along the complete length of the compression path and then tighten both hose clamps.



If difficulty is found seating the hose against the pump body try refitting the roller as below, the action of the rollers compressing the hose as the pump is rotated will help position the hose.

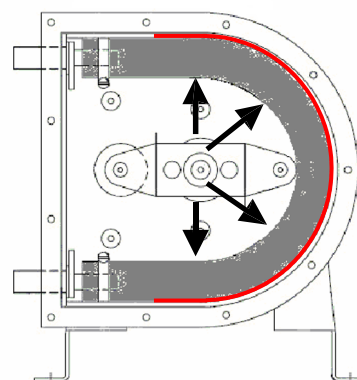

Refit the compression roller, by first rotating the rotor 180° so that the roller to be replaced lies between the inlet and outlet ports.



Always recheck the roller gap after you have refitted the roller.

Fitting the Front Cover

The front cover gasket is a self adhesive strip that is pre-applied to the pump and remains in place when the front cover is opened. Should this gasket strip become damaged in any way, it should be removed and a new strip applied.

Swing the hinged front cover closed and hinge the swing bolts into the corresponding slots in the outer cover before tightening evenly.



If the front cover has “dropped” on the hinges it may be helpful to use a lifting jack or similar under the cover to help align the swing bolts.



Be careful to avoid trapping hands and fingers when closing the hinged front cover.

Ensure the lubricant drain plug is installed with PTFE tape of similar demountable pipe thread sealant.

Fill the pump housing with lubricant through the fill plug hole. Once filled you should be able to see the lubricant in the middle of the sight glass at the front of the pump. Replace the fill plug and check the pump housing for leakage.

If previously disconnected, reconnect all pipework and open all suction and discharge valves.

The pump is now ready for normal operation. Upon restarting check for abnormal vibrations and other irregularities such as abnormal noise.


Rotor Removal

Follow the procedures as detailed earlier for the removal of the pump hose.

Remove the rotor clamp screws (B) and slide the rotor and splined adapter off the shaft.



The rotor assembly is heavy and suitable lifting equipment will be required to support the load as it is pulled off the gearbox shaft.

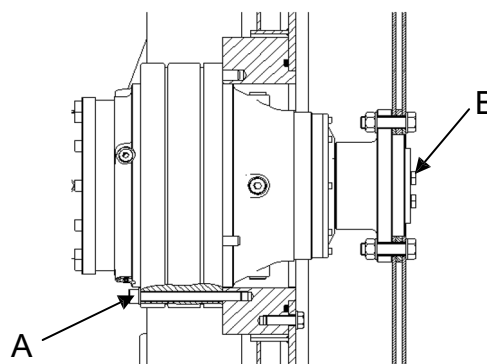

Gearbox Drive Removal

Once the rotor has been removed, the gearbox can be removed if required.

The fixing screws (A) are socket headed cap screws through the gearbox flange into the rear of the pump housing.



Before removing the gearbox fixing bolts ensure the gearbox is adequately supported via the correct lifting method, and that the pump is properly fastened to the floor as removing the gearbox will cause a sudden change in the centre of gravity.

Remove the gearbox fixings and carefully pull the gearbox off the mating spigot..

Gearbox Drive Replacement

Prior to assembly clean and degrease all mating surfaces, ensuring all faces are free from traces of paint and sealants

Carefully lift the gearbox drive into place and locate the flange spigot on the rear of the pump housing.

Line up the fixing holes and insert the socket headed cap screws into the gearbox adapter on the rear of the pump housing.

Rotor Replacement

Clean the bore of the rotor assembly applying a small amount of anti-seize compound such as Copaslip® to the gearbox splines.

Slide the rotor assembly onto the gearbox shaft ensuring it is square at all times and fit the retaining screws.




Do not hammer the rotor assembly if the shaft is a tight fit in the rotor; pull the rotor onto the shaft with a long bolt.

Hose Connector Assembly

The hose connector inserts may be fitted independently, rather than as a hose element assembly. After first ensuring all mating faces are clean, fit the gaskets over the outer connection of each hose connector.


Insert hose connector in to the pump, passing the outer connection through the respective port in the pump body, with the gaskets on the inside of the pump body.

Insert and tighten the insert retaining bolts.

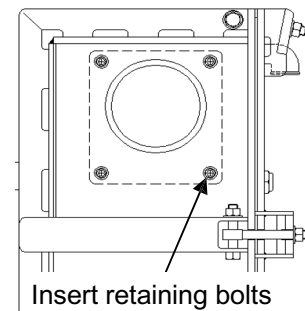



Exploded View for L100 Series Pump

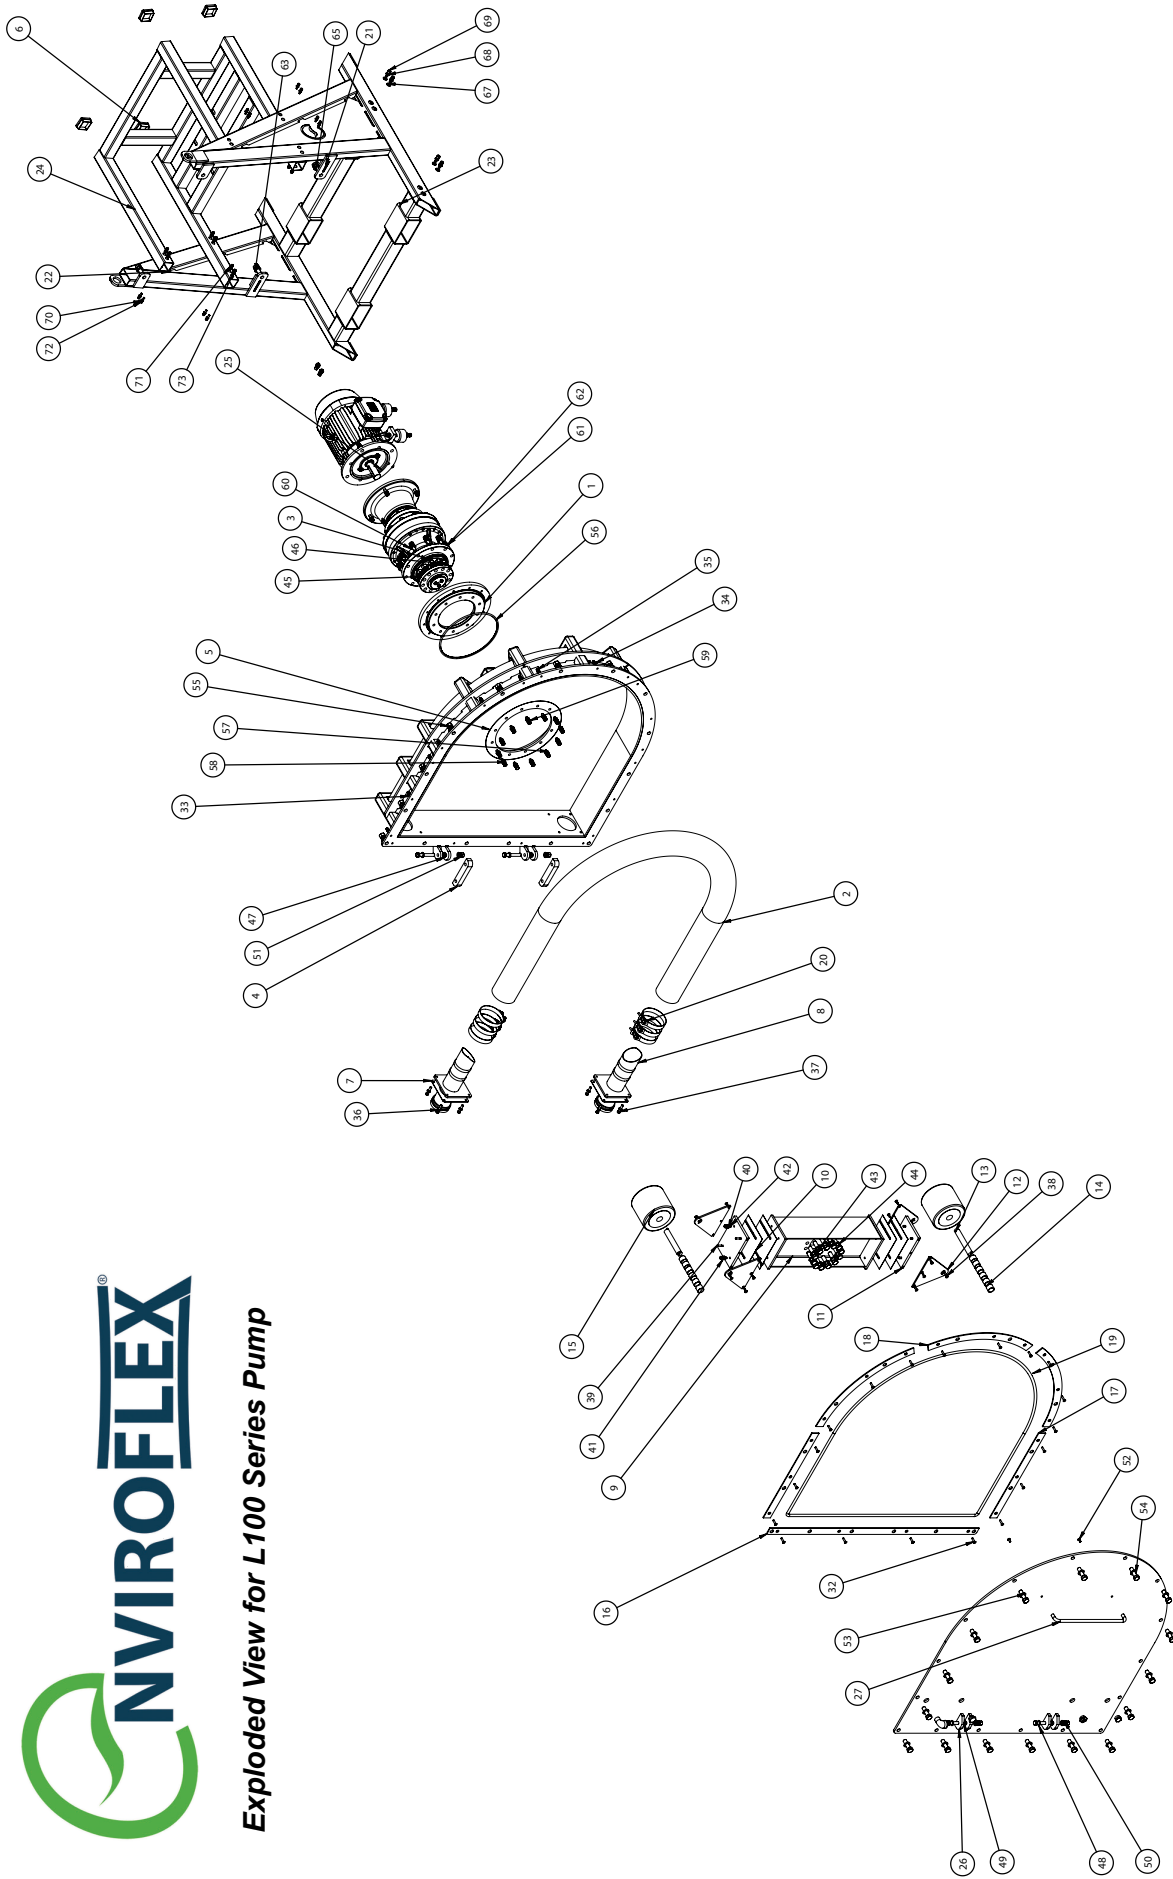

L100 Series Pump Parts List

Item No.	Part Number	Description	* Weight (Kg) Per Unit	Qty.
1	L-100-GB-MF-1	Gearbox Mounting Flange	20.87	1
2**	L-100-NRH	Pump Hose - NATURAL RUBBER	24.99	1
	L-100-NRH-FG	Pump Hose - NATURAL RUBBER (FOOD GRADE)	24.99	1
	L-100-NIT-IND	Pump Hose - NITRILE (INDUSTRIAL)	24.99	1
	L-100-NIT-FG	Pump Hose - NITRILE (FOOD GRADE)	24.99	1
	L-100-EPDM	Pump Hose - EPDM	24.99	1
	L-100-HYP	Pump Hose - HYPALON	24.99	1
3	L-100-Gear Box	Gear Box	103.78163	1
4	L-100-33	Hinge Link Plate	1.81	2
5	L-100-PH-1	Pump Housing	357.15	1
6	L-100-Frame Plastic End Cap	Frame Plastic End Cap	0.06	4
7	L-100-HC-CS-1	Hose Flange Seal	0.06	2
8	L-100-HC-1	Hose Connector	5.05	2
9	L-100-R-1	Rotor	38.53	1
10	L-100-SH-1 / L-100-SH-2	Shim 0.6mm / Shim 1.0mm	0.37	A/R
11	L-100-ROL-M-1	Roller Mount	5.44	2
12	L-100-ROL-SP-1	Roller Side Plate	1.72	4
13	L-100-ROL-SH-1	Roller Shaft	1.03	2
14	L-100-ROL-B-1	Roller Bush	0.05	12
15	L-100-ROL-1	Roller	5.33	2
16	L-100-83	Sealing Strip Verticle	0.36	1
17	L-100-84	Sealing Strip	0.17	2
18	L-100-85	Sealing Strip Curved	0.18	3
19	LS-6811	Front Cover Seal	1.09	1
20**	LC-4022	Hose Clamp	0.36	6
21	L-100-F-L-1	Pump Frame Left	5.68	1
22	L-100-F-R-1	Pump Frame Right	5.68	1
23	L-100-64	Cross Bar Welded	2.73	2
24	L-100-Frame Complete-Motor Frame	Motor Protection Frame	6.06	1
25	L-100-Frame Complete-Motor Rubber Mounts	Motor Rubber Mounts	0.20	4
26	L-100-11	Front Cover	23.91	1
27	LH-4002	Handle	0.13	1
28	LT-5100S	Breather Elbow	0.26	1
29	LT-5102	Sight Glass	0.02	1
30	LP1001	Fill Plug	0.02	1
31	LP1002	Drain Plug	0.04	1
32	LB-3215	Sealing Strip Fixings	0.017	19
33	LW-5001	Flat Washer	0.002	19
34	LW-5101	Spring Washer	0.003	19
35	LN-4000	Nut	0.007	19
36	LW-5002	Flat Washer	0.004	8
37	LB-3292	Hose Connector Fixing	0.045	8
38	LB-3213	Roller Shaft and Side Plate Fixings	0.011	16
39	LD-1001	Dowel	0.01	4
40	LW-5002_	Flat Washer	0.004	4
41	LW-5102_	Spring Washer	0.004	4
42	LB-3028	Roller Mount Fixings	0.0331	4
43	LW-5007	Flat Washer	0.017	24

L100 Series Pump Parts List


44	LB-3252	Rotor to Motor Fixings	0.2583	12
45	LW-5107	Spring Washer	0.024	12
46	LN-4007	Nut	0.081	12
47	L-150-34	Washer	0.002	8
48	LW-5005	Flat Washer	0.012	8
49	LB-3260	Front Cover Hinge Fixings	0.2192	4
50	LW-5105	Spring Washer	0.012	4
51	LN-4006	Nut	0.043	4
52	LB-1213	Front Cover Handle Fixings	0.011	2
53	LW-5004	Flat Washer	0.017	32
54	LB-3283	Front Cover Fixing	0.2583	16
55	LN-4011	Nut	0.081	16
56	LS-6804	Adaptor Flange O Ring	0.08	1
57	LW-5003	Flat Washer	0.006	12
58	LW-5103	Spring Washer	0.006	12
59	LB-3049	Flange to Pump Housing	0.0537	12
60	LW-5005	Flat Washer	0.012	10
61	LW-5105	Spring Washer	0.012	10
62	LB-3248	G'Box to G'Box Mounting Flange Fixing	0.1227	10
63	LW-5004	Flat Washer	0.017	8
64	LW-5104	Spring Washer	0.019	4
65	LB-3247	Frame Mounting Screws	0.2332	4
66	LW-0000	Nut	0.081	4
67	LW-5003	Flat Washer	0.006	8
68	LW-5103	Spring Washer	0.006	8
69	LB-3247	Cross Bar Fixing Screws	0.047	8
70	LW-0002	Flat Washer	0.002	24
71	LW-0102	Spring Washer	0.002	12
72	LB-0002	Motor Frame Fixings	0.019	12
73	LN-0002	Nut	0.007	12

* 1 Kg = 2.2 pounds

** Recommended spares with 40 litres of Envirolube Lubricant.



Exploded View for L150 Series Pump

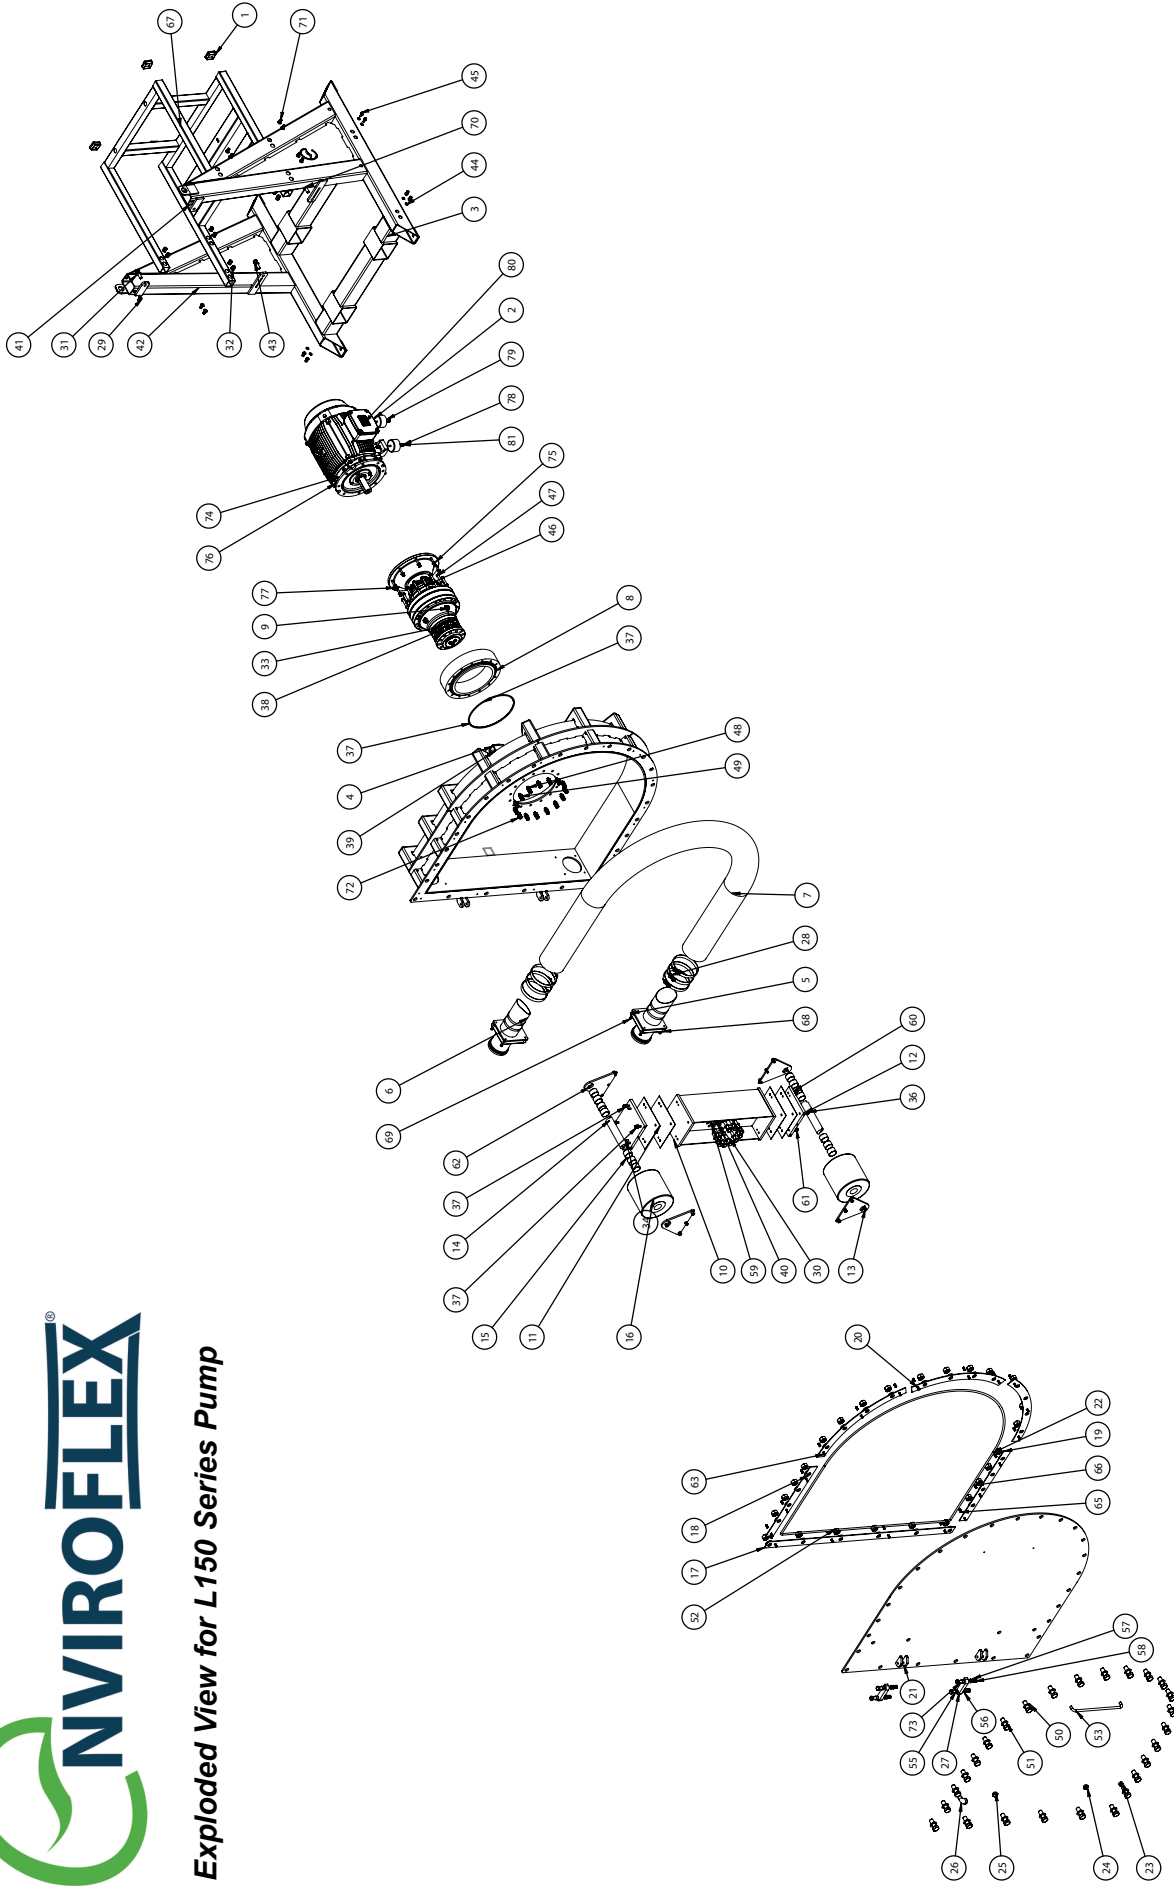

L150 Series Pump Parts List

Item No.	Part Number	Description	* Weight (Kg) Per Unit	Qty.
1	D-L150-Frame Plastic End Cap	Frame Plastic End Cap	0.06	4
2	D-L150-Rubber Mounts	Motor Rubber Mounts	0.42	4
3	L-150-64	Cross Bar Welded	41.00	2
4	L-150-PH-1	Pump Housing	647.48	1
5	L-150-HC-CS-1	Hose Connector Fixing	0.12	2
6	L-150-HC-1	Hose Connector	9.17	2
7**	L-150-NRH	Pump Hose - NATURAL RUBBER	98.81	1
	L-150-NRH-FG	Pump Hose - NATURAL RUBBER (FOOD GRADE)	98.81	1
	L-150-NIT-IND	Pump Hose - NITRILE (INDUSTRIAL)	98.81	1
	L-150-NIT-FG	Pump Hose - NITRILE (FOOD GRADE)	98.81	1
	L-150-EPDM	Pump Hose - EPDM	98.81	1
	L-150-HYP	Pump Hose - HYPALON	98.81	1
8	L-150-GB-MF-1	Gearbox Mounting Flange	10.63	1
9	D-L150-Gear Box	Gearbox	158.45512	1
10	L-150-R-1	Rotor	83.15	1
11	L-150-SH-1 / L-150-SH-2	Shim 0.6mm / Shim 1.0mm	0.72	A/R
12	L-150-ROL-M-1	Roller Mount	16.01	2
13	L-150-ROL-SP-1	Roller Side Plate	4.19	4
14	L-150-ROL-SH-1	Roller Shaft	6.46	2
15	L-150-ROL-B-1	Roller Bush	0.16	14
16	L-150-ROL-1	Roller	20.22	2
17	L-150-127	Sealing Strip Verticle	5.33	1
18	L-150-128	Sealing Strip	0.31	1
19	L-150-128	Sealing Strip	2.40	1
20	L-150-129	Sealing Strip Curved	0.34	3
21	L-150-11	Front Cover	38.61	1
22	LS-6812	Front Cover Seal	1.43	1
23	LP1002	Drain Plug	0.04	1
24	LT-5102	Sight Glass	0.05	1
25	LP1001	Fill Plug	0.05	1
26	LT-5100S	Breather Elbow	0.26	1
27	L-150-33	Hinge Link Plate	1.56	2
28**	LC-4023	Hose Clamp L150	0.46	6
29	LW-5004	Flat Washer	0.017	28
30	LW-5004	Flat Washer	0.017	24
31	LW-5004	Flat Washer	0.017	1
32	LN-4008	Nut	0.043	12
33	LN-4008	Nut	0.043	16
34	LD-8004	Dowel	0.03	4
35	LB-3262	Roller Mount Fixings	0.0664	7
36	LB-3262	Roller Mount Fixings	0.0664	1
37	LS-6805	Adaptor Flange O Ring	0.08	1
38	LW-5104	Spring Washer	0.029	12
39	LW-5104	Spring Washer	0.029	5
40	LB-3261	Rotor to Motor Fixings	0.3124	12
41	L-150-F-R-1	Pump Frame Right	125.75	1
42	L-150-F-L-1	Pump Frame Left	125.75	1
43	LB-3243	Frame Mounting Screws	0.2528	4
44	LW-5005	Flat Washer	0.006	8
45	LW-5103	Spring Washer	0.009	8

L150 Series Pump Parts List

46	LW-5105	Spring Washer	0.012	15
47	LB-3259	G'Box to G'Box Mounting Flange Fixing	0.2966	15
48	LW-5005	Flat Washer	0.012	15
49	LW-5105	Spring Washer	0.015	15
50	LW-5008	Flat Washer	0.055	52
51	LB-3277	Front Cover Fixing	0.7234	26
52	LN-4009	Nut	0.257	26
53	LH-4002	Handle	1.02	1
54	LB-1213	Front Cover Handle Fixing	0.011	2
55	L-150-34	Washer	0.012	8
56	LW-5005	Washer	0.012	8
57	LW-5105	Spring Washer	0.015	4
58	LN-4006	Nut	0.043	4
59	L-150-67	Spacer Ring	1.86	1
60	LW-5003	Flat Washer	0.006	8
61	LW-5103	Spring Washer	0.009	8
62	LB-3229	Roller Shaft and Side Plate Fixing	0.040	16
63	LB-3215	Sealing Strip Fixings	0.017	19
64	LW-5001	Flat Washer	0.002	19
65	LW-5101	Spring Washer	0.002	19
66	LN-4000	Nut	0.007	19
67	L-150-Frame Complete-Motor Bracket	Motor Frame	59.46	1
68	LW-5003	Flat Washer	0.006	8
69	LB-3293	Hose Connector Fixing	0.048	8
70	LW-5004	Flat Washer	0.017	6
71	LB-3247	Cross Bar Fixing Screw	0.047	24
72	LB-3248	Flange to Pump Housing	0.1197	15
73	LB-3260	Front Cover Hinge Fixing	0.2162	4
74	225S_M_RIGHT	Motor	105.16955	1
75	LW5003	Flat Washer	0.017	17
76	LW5103	Spring Washer	0.029	8
79	LW5003	Flat Washer	0.017	8
81	LW5103	Spring Washer	0.029	4

* 1 Kg = 2.2 pounds

** Recommended spares with 110 litres of Envirolube Lubricant.

User Guide

Troubleshooting

If the pump does not appear to be functioning correctly, consult the following guide to see if you can identify and remedy the problem yourself. If the problem still persists, please contact Enviroflex Limited or your authorised local dealer for more detailed information

Problem	Probable Cause(s)	Suggested Remedy
The pump does not start when turned on.	Defective motor	Check motor is running Check fuses. Check motor protection switch. Make sure that all phases have required voltage
	Frequency inverter (when used) incorrectly set-up	<u>Connect motor DOL</u> <u>Check inverter settings</u>
	Shaft key broken or missing	<u>Make sure that a key is fitted and that all surfaces of friction are clean and undamaged. The hub screws re correctly tightened</u>
	Pump rotating in reverse	<u>Check direction of the motor is correct</u>
	The pump is taking in air	<u>Identify the source of air intake and exchange seals or gaskets</u>
	Rollers are not adjusted correctly	<u>Adjust the roller occlusion</u>
Pump runs but there is no flow of media.	Hose blocked	Reverse the pumps rotation and remove any obstacles. If this is not possible with your system, the pump needs to be disassembled and obstacles removed.
	Pipeline on suction side of the pump is clogged	Clean pipeline, valves, filters etc.
	Pump has pumped against excessive pressure and hose has detached from hose connector	Remove reason for overpressure, fit overpressure protection, check pump for damage and reattach hose and refill lube
Flow is less than calculated	Pump is running too slow	It maybe possible to fit a speed inverter or make a gear ratio change (not always possible). Call Environmental Pumping Solutions Ltd to discuss
	The pump is taking in air	Locate the source of air intake and exchange seals or gaskets
Flow is less than calculated	Restriction in the suction pipe	Identify and remove the restriction
	Viscosity is too high for the size of pump	Turn down the pump speed and/or utilise a larger pump

Problem	Probable Cause(s)	Suggested Remedy
Flow is less than calculated	Rollers are not adjusted correctly	Adjust the roller occlusion
	Backpressure is too high	Change the pipeline on the pressure side of the pump
	Suction pipe is too long for the diameter creating too high suction pulsation losses	Consult Enviroflex Limited
Noise	Pump cavitating	Lower the speed or utilise a bigger pump or change the pipelines
	Air or gas in the pipelines	Seal of possible air intakes
	Pressure too high	Clear pipelines and check pipe sizes Lower the pumping speed
	Rollers are not adjusted correctly	Adjust the roller occlusion
	Gearwheels or bearings worn out	Workshop overhaul of pump needed
	Hose damaged	Exchange the hose
	Suction and discharge lines not correctly fastened	Fasten correctly
Vibration of the pump and pipework	High pump speed with long suction and discharge lines or high product specific gravity or a combination of these factors	Reduce pump speed. Reduce the line lengths on both suction and discharge where possible. Consult Enviroflex Limited
	Too small diameter of suction and/or discharge pipework	Increase the pipework size
	Pressure too high	Check discharge pressure is as per pump data sheet. Check pump speed is as per pump data sheet. Check pipelines are clear Check pump hose is not damaged (New installation) Check pipes sized correctly
Pump draws too much current.	Sedimentation of solid substance when not using the pump	Empty the pump after use, flush the pump with clean water after use
	Fluid or particle buildup in or by the motor	Clean the motor
	High pump speed	Reduce pump speed or install larger pump
Short Hose life	Hose deteriorating chemically	Reassess the choice of material for the hose
	High pulsations	Consult Enviroflex Limited for detailed advice
	Incorrect hose lubricant used	Use only Envirolube lubricant
Pump parts wearing quickly	Hose wearing mechanically on the outside	Check compression roller occlusion

Problem	Probable Cause(s)	Suggested Remedy
Pump parts wearing quickly	Hose wearing mechanically on the inside	Check compression roller occlusion
	Roller bearings (bushings) wear down quickly	Check compression roller occlusion
	Abrasive product mixed in the hose lubricant	Wash out pump body and change lubricant. Ensure pump body is fully cleaned when replacing a failed hose
High pump temperature	Incorrect hose lubricant used	Use only Envirolube lubricant
	Product temperature too high	Consult Enviroflex Limited
	Pump running too fast	Reduce pump speed
	Possible restriction in the suction pipe	Dismantle the suction piping, identify the restriction and remove
Lubricant leakage	Leaking seal or gasket	Identify the leaking seal or gasket. Tighten retaining bolts. Replace seal or gasket if needed

For trouble free pump operation, please refer also to the Routine Maintenance instructions as detailed earlier in this manual.

Specifications

Pump operating conditions

Description	L100	L150
Max continuous flow (m ³ /hr)	46.8	105
Capacity per revolution (l/rev)	26.0	70.0
Maximum working pressure	10 Barg*	10 Barg*
Ambient working temperature	-10°C to +40 °C	
Product working temperature	-10°C to +80 °C*	
Sound level at 1m	< 70 dB(A) whilst pumping water at maximum continuous flow	

* Your pump may not have been configured to run at these stated maximums. Please check your Technical Data Sheet.

Materials of Construction

Description	Standard	Optional	
Pump Body	Carbon Steel	304 st.stl.	316 st.stl.
Front Cover	Carbon Steel	304 st.stl.	316 st.stl.
Rotor	Carbon Steel	304 st.stl.	316 st.stl.
Compression Rollers	POM		
Hose connectors	304 st.stl.	316 st.stl.	
Support Frame	Carbon Steel	304 st.stl.	316 st.stl.
Gasket seals	Nitrile		
Fasteners	MS BZP	304 st.stl.	316 st.stl.

Hose Lubricant Quantities

	L100	L150
Volume of hose lubricant (litres)	40	110



Contact Enviroflex Limited or your authorised local dealer should you require a Material Safety Data Sheet (MSDS) for Enviroflex Roller Lubricant.

Weights and Dimensions

The details below are approximate only. Please refer to your Technical Data Sheet or Enviroflex Limited for specific details of the supplied equipment.

	L100	L150
Net weight (kgs)	900	1800
Overall size (cm)	154x166x133	170x209x195

	L100	L150
Gross (packed) weight (kgs)	1135	2264
Overall packed case size (cm)	170x190x150	190x230x215

Recommendations for Hose Storage

We recommend that pump hoses are stored in accordance with BS3574. Peristaltic Hoses can be considered as Group A products as detailed in this specification, i.e. products with moderate susceptibility to deterioration. The relevant points from this specification are:

Temperature:	<p>To be below 25°C and articles stored away from direct sources of heat such as boilers, radiators and direct sunlight.</p> <p>For articles stored below 15°C their temperature should be raised to approx. 30°C throughout their mass prior to use.</p>
Humidity:	<p>Humidity shall be such that condensation shall not occur. The criterion for this is that either the storage temperature should be above the dew point or humidity levels should be low enough to ensure the dew point is below the storage temperature.</p>
Light:	<p>Protect from strong light sources, in particular direct sunlight or intense artificial light having a high ultraviolet content.</p>
Ozone:	<p>Storage areas shall not contain equipment which generates ozone - e.g. mercury vapour lamps, high voltage electrical equipment, combustion gases, organic vapours.</p>
Deformation:	<p>Store free from superimposed tensions or compression. For a hose this means that the supports must be wide enough and spaced in a way as to spread the load over a wide area. We would recommend a minimum width of 100mm for any support spaced no more than 500mm apart. It is preferable that hoses are supported over their entire length.</p> <p>Do not store hoses coiled.</p>
Contact with Liquids:	<p>Do not allow contact with liquids (e.g. petrol, greases, acids, disinfectants, cleaning fluids).</p>
Contact between Hoses:	<p>Avoid direct contact between hoses of different types, particularly between hoses of different colours.</p>
Rotation of Stock:	<p>Hoses must be issued in strict rotation by manufacturing date or production code.</p>

Hoses will be delivered wrapped individually in opaque polythene, we would recommend that the packing is kept on the hoses prior to use to reduce the effects of light and to minimise contact with other materials. Individual hoses are marked with a production code identifying the manufacturing period.

EC Declaration of Conformity

In accordance with EN ISO 17050-1:2004

We
of

Enviroflex Ltd
Pump Point, Ascot Drive, Derby, DE24 8GZ

in accordance with the following Directive(s):

2004/108/EC	The Electromagnetic Compatibility Directive
2006/42/EC	The Machinery Directive

hereby declare that:

Equipment	Peristaltic Pump
Models	L100 & L150

is in conformity with the applicable requirements of the following documents

Ref. No.	Title	Edition/date
BS EN ISO 12100-1	Safety of machinery. Basic concepts, general principles for design. Basic terminology, methodology	2003
BS EN ISO 12100-2	Safety of machinery. Basic concepts, general principles for design. Technical principles	2003
BS EN 809	Pumps and pump units for liquids. Common safety requirements	1998
BS EN 60204-1	Safety of machinery. Electrical equipment of machines. General requirements	2006 +A1:2009
BS EN 61000-6-1	Electromagnetic compatibility (EMC). Generic standards. Immunity for residential, commercial and light-industrial environments	2007
BS EN 61000-6-3	Electromagnetic compatibility (EMC). Generic standards. Emission standard for residential, commercial and light-industrial environments	2007

I hereby declare that the equipment named above has been designed to comply with the relevant sections of the above referenced specifications and is in accordance with the requirements of the Directive(s)

Signed by:



Name: D Gascoyne

Position: Director

at Pump Point, Ascot Drive, Derby, DE24 8GZ

Date 29th August 2024



The technical documentation for the machinery is available from the manufacturer at the above address.

Product Use Declaration Form

Product Use Declaration Form					
<p>In compliance with the Health & Safety Regulations and the Control of Substances Hazardous to Health Regulations you, the user are required to declare the substances which have been in contact with the product(s) you are returning to Environmental Pumping Solutions Limited or any of its subsidiaries or distributors. Failure to do so will cause delays in servicing the item or in issuing a response. Therefore, please complete this form to ensure that we have the information before receipt of the item(s) being returned. A FURTHER COPY MUST BE ATTACHED TO THE OUTSIDE OF THE PACKAGING CONTAINING THE ITEM(S) before returning. You, the user, are responsible for cleaning and decontaminating the item(s) before returning them.</p>					
<p>Please complete a separate Declaration Form for each item returned.</p>					
<p>Company:</p> <p>Address: Postcode: Telephone: Fax Number: e-mail:</p>					
<p>Product:</p> <p>Serial Number:</p> <p>Has the Product been used?</p> <table border="1" style="margin-left: 40px; border-collapse: collapse; text-align: center;"> <tr> <td style="width: 25px;">YES</td> <td style="width: 25px;"></td> <td style="width: 25px;">NO</td> <td style="width: 25px;"></td> </tr> </table>	YES		NO		<p>Cleaning fluids to be used if residue product is found during servicing:</p> <p>1.</p> <p>2.</p> <p>3.</p> <p>4.</p>
YES		NO			
<p>If yes, please complete all the following sections</p>					
<p>If no, please complete declaration only</p>					
<p>Details of Substances Pumped</p>					
<p>Chemical names:</p> <p>1.</p> <p>2.</p> <p>3.</p> <p>4.</p>	<p>I hereby confirm that the only substance(s) that the item specified has handled or come into contact with are those named, that the information given is correct, and the carrier has been informed if the consignment is of a hazardous nature.</p>				
<p>Precautions to be taken when handling the above:</p> <p>1.</p> <p>2.</p> <p>3.</p> <p>4.</p>	<p>Signed:</p> <p>Name:</p> <p>Position:</p> <p>Date:</p>				
<p>Action to be taken in the event of human contact:</p> <p>1.</p> <p>2.</p> <p>3.</p> <p>4.</p>					
<p>Any other additional information you may regard as useful:</p> <p>.....</p> <p>.....</p> <p>.....</p>					